

GV-Mobile NVR System

User's Manual





© 2013 GeoVision, Inc. All rights reserved.

Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of GeoVision.

Every effort has been made to ensure that the information in this manual is accurate. GeoVision, Inc. makes no expressed or implied warranty of any kind and assumes no responsibility for errors or omissions. No liability is assumed for incidental or consequential damages arising from the use of the information or products contained herein. Features and specifications are subject to change without notice.

GeoVision, Inc.
9F, No. 246, Sec. 1, Neihu Rd.,
Neihu District, Taipei, Taiwan
Tel: +886-2-8797-8377
Fax: +886-2-8797-8335
<http://www.geovision.com.tw>

Trademarks used in this manual: *GeoVision*, the *GeoVision* logo and *GV* series products are trademarks of GeoVision, Inc. *Windows* and *Windows XP* are registered trademarks of Microsoft Corporation.

April 2013

User's Manual for GV-Mobile NVR System

Welcome to the GV-Mobile NVR System User's Manual.

The Manual provides an overview of the GV-Mobile NVR System and its accessories. It also includes the instructions to guide you through the installation and use of the GV-Mobile NVR System:

- **Chapter 1, Introduction**

Identifies the GV-Mobile NVR System's accessories and options.

- **Chapter 2, Overview**

Identifies the GV-Mobile NVR System's components.

- **Chapter 3, Getting Started**

Provides step-by-step instructions on setting up the GV-Mobile NVR System.

- **Chapter 4, NVR Health Analysis**

Introduces how to collect data to obtain the service of NVR health analysis from GeoVision.

- **Chapter 5, Troubleshooting**

Suggests courses of action if the GV-Mobile NVR System does not seem to be working properly.

Contents

Safety Instructions	iv
Chapter 1 Introduction.....	1
1.1 Features	1
1.2 Packing List	2
1.3 Software License	3
1.4 Options	4
Chapter 2 Overview	5
2.1 Right Side View	5
2.2 Left Side View	7
Chapter 3 Getting Started.....	8
3.1 Basic Installation	8
3.1.1 Turning On and Turning Off the Power	10
3.1.2 Connecting Dual Monitors	11
3.2 Formatting the Storage Drive	12
3.3 Adding the Storage Drive to the Recording Path	17
3.4 Replacing the Storage Drive	19
3.5 Setting Up On-Screen LED Panel	20
3.6 Configuring the IP Address	22
3.7 Exiting to Windows.....	25
3.8 Returning to GV-Desktop	26
3.9 Twin View Display	27
3.10 Digital Matrix	29
3.10.1 Activating Two Monitors.....	29
3.10.2 Setting Live View	30
3.10.3 Setting Scanned Pages	31
3.10.4 Setting Pop-up Alert	32
3.10.5 Setting Live View with Pop-up Alert	34
3.11 System Restoration.....	35
3.11.1 Using an External DVD Drive.....	35
3.11.2 Using an External USB Flash Drive	38
3.12 Updating GV-Mobile NVR	40
Chapter 4 Health Analysis.....	41
4.1 System Settings	41
4.2 System Log	43
4.3 Information of Your Computer System	44
4.4 Health Analysis Form	46

4.5 Check List.....	46
Chapter 5 Troubleshooting	47
Specifications	50
Warranty Policy	57
Warranty Requirements	60
Warranty Form	62

Safety Instructions



Observe these safety instructions to help ensure against injury to yourself and damage to the product.

- **Read** all safety and installation instructions before you operate the product.
- **Do not operate** the product in high humidity areas or expose it to water or moisture.
- **Do not put** the product in an unstable, a slanting or vibrated place.
- **Do not block** any ventilation opening.
- **Do not install** the product near any heat sources such as radiator, heat register or other apparatus that produce heat.
- **Operate** the product using only the type of power source indicated on the marking label.
- **Do not defeat** the safety purpose of the grounding-type plug. A grounding plug has two blades and a third grounding prong. The third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **Do not overload** wall outlets or extension cords, as this may cause fire or electric shock.
- **Do not use** the product when abnormality occurs, such as emitting smoke from the product, smelling burning, being damaged by drop, invasion of foreign objects inside the product, etc. Be always sure to remove the AC adaptor at once and contact your dealer.
- **Do not use** accessories or attachments not recommended by the manufacturer, as they may cause hazards and void the warranty.
- **Do not attempt** to service the product yourself, as removing the casing may expose you to dangerous voltage and void the warranty.

Chapter 1 Introduction

GV-Mobile NVR System is a purpose-built solution to withstand extreme and rugged environment, such as the inside of cars, public transit, ferries, emergency response vehicles and law enforcement vehicles. With up to 32 channels of GV-IP megapixel cameras supported and 2 hot swappable bays of HDD or SSD choice, this supreme Mobile NVR system provides all-in-one solution for in-vehicle security.

1.1 Features

- Powered by Intel Core i5 Processor
- 64-bit Windows Embedded Standard 7 SP1
- Support for GPU Decoding
- Power Ignition Management (ACC)
- 2-bay Hot Swap Storage with Capacity of up to 2 Terabytes
- Fanless System
- Vibration and Mechanical Shock Protection
- Wide Working Temperature
- Trio Gigabit LAN ports
- Dual-monitor Display (VGA and DVI-D outputs)
- Support for 32-channel GV-NVR (pure IP surveillance)
- Support for 3rd Party IP cameras with H.264
- All-in-one Solution (Live View, Playback, Recording, Backup, CMS)
- Video Analysis (Advanced Motion Detection, Privacy Mask, Scene Change Detection and Counter)
- Automatic Connection to GV-IP cameras
- Fisheye Camera Dewarping Function
- Dual Video Streams
- On-screen LED Panel for Storage Status
- Smart Device Access
- Multiple (29) Languages

1.2 Packing List

The GV-Mobile NVR package includes the following items. If any of the items are missing or damaged, contact your dealer to arrange a replacement.

Important: Please keep the original carton and all packing materials for future shipping need.

1. GV-Mobile NVR System x 1
2. AC Power Cord x 1
3. Power Adapter x 1
4. Wall Mount Bracket x 2



5. 2-pin Terminal Block x 2 (for ACC and Car Battery Connection)



6. Key for Hard Disk Lock x 2
7. Screw Pack x 1 (For Wall Mount Bracket)
8. GV-NVR Dongle for third-party IP Camera Connection (Optional)
9. GV-Mobile NVR System Quick Start Guide x 1
10. GV-Mobile NVR User's Manual x 1
11. Software DVD x 1
12. Recovery DVD x 1

1.3 Software License

Free License	32 channels from GV-IP devices
Maximum License	32 channels from third-party IP devices
Increment for Each License	1 to 32 third-party IP cameras at an increment of 2
Optional Combinations	N/A
Dongle Type	External

1.4 Options

Optional devices can expand your GV-Mobile NVR's capabilities and versatility. Contact your dealer for more information.

GV-IO Box (4 Ports)	GV-IO Box 4 provides 4 inputs and 4 relay outputs, and supports both DC and AC output voltages. A USB port is provided for PC connection.
GV-IO Box (8 Ports)	GV-IO Box 8 provides 8 inputs and 8 relay outputs, and supports both DC and AC output voltages. A USB port is provided for PC connection.
GV-IO Box (16 Ports)	GV-IO Box 16 provides 16 inputs and 16 relay outputs, and supports both DC and AC output voltages. A USB port is provided for PC connection.
GV-Keyboard V3	The GV-Keyboard V3 is designed to program and operate the system, and it can also be connected with PTZ cameras directly for PTZ control.
GV-GPS Receiver	The GV-GPS Receiver can work with GV-Mobile NVR to perform GPS vehicle tracking.
WiFi USB Adapter	The WiFi USB Adaptor is designed to connect the GV-IP devices to the wireless network. This product complies with IEEE 802.11 b/g/n (Draft 3.0) standards for wireless networking.
GV-IR Remote Control	Controls GV-Mobile NVR with the Remote Control.
GV-TouchDisplay133	The GV-TouchDisplay133 is a touch panel designed for in-vehicle devices such as GV-Mobile NVR and GV-Compact DVR Series to monitor 4 channels and operate OSD.

Chapter 2 Overview

2.1 Right Side View

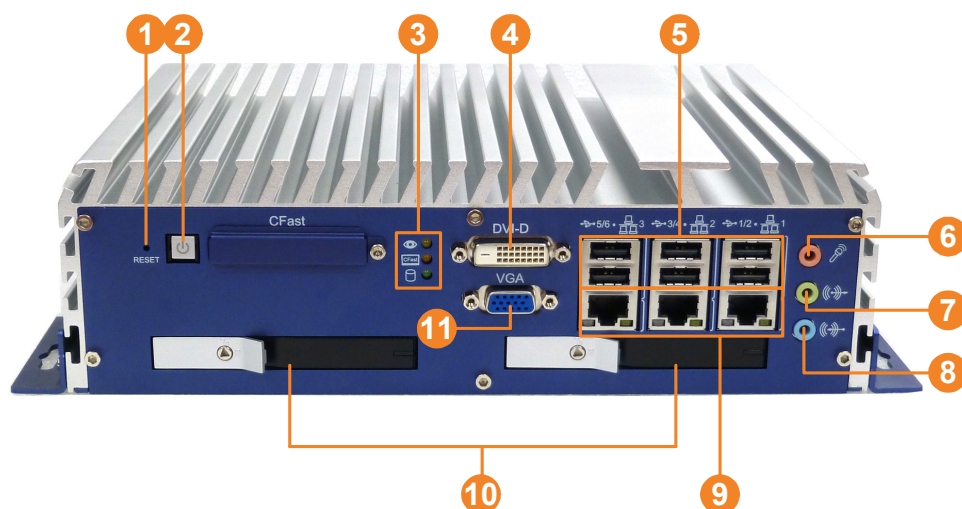


Figure 2-1

No.	Name	No.	Name
1	Reset Button	7	Audio Line Out Port
2	Power Button	8	Audio Line In Port
3	Status Indicator LEDs	9	Gigabit Ethernet Port x 3
4	DVI-D Port	10	2.5" Storage Slot x 2
5	USB 2.0 Port x 6	11	VGA Port
6	Audio Microphone In Port		

Status Indicator LEDs

See the below descriptions for each status LED.

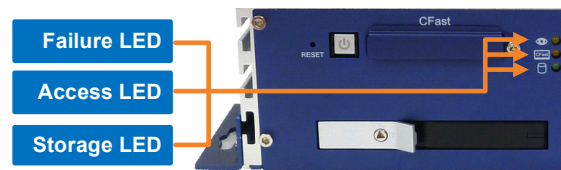


Figure 2-2

Indicator LED	Color	Description
Failure LED	Orange	Glowes when errors occur.
Access LED	Red	Flashes upon turning on the unit.
Storage LED	Green	Blinks when the storage drive reads and writes data.

2.2 Left Side View



Figure 2-3

No.	Name	No.	Name
1	Power Connector	4	COM Port x 4
2	ACC Connector	5	DC 6-36V Power Connector
3	eSATA x 2		

Note: To connect power, choose either 1 or 5.

Chapter 3 Getting Started

3.1 Basic Installation

This section describes all the equipments required to program and operate the GV-Mobile NVR.


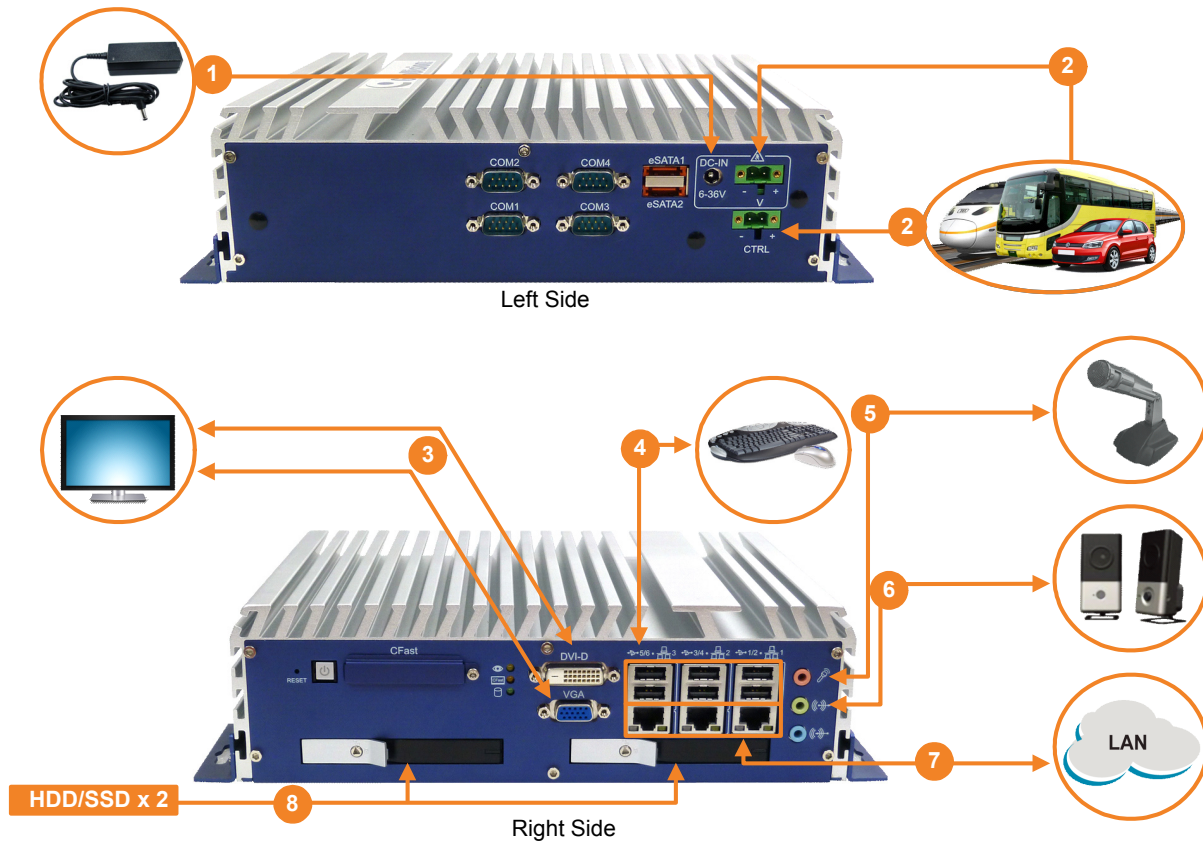



Figure 3-1

1. If you are using the supplied AC Power Cord and Power Adapter to connect the power, connect the GV-Mobile NVR to the power outlet directly.
2. If you are using the ACC and power wires on the vehicle to connect the GV-Mobile NVR, follow the below steps.

- A. Using appropriate power wires, connect one end to the vehicle's power supply and the other end to the supplied terminal block. Note the positive and negative markings on the unit's panel before you connect power wires to the terminal block. Plug the connected terminal block to the upper power pins.

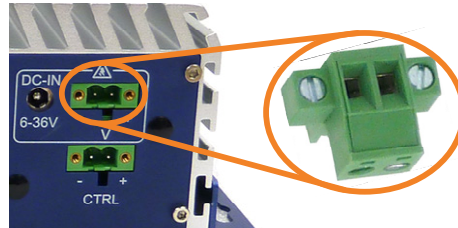

- B. Using the ACC wire, connect to the supplied terminal block. Note the positive pin on the unit's panel and plug the connected terminal block to the lower ACC pins.

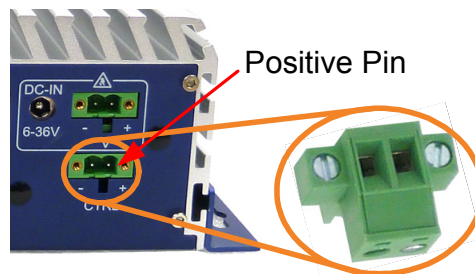

3. There are two ways to connect the monitor to the GV-Mobile NVR.
 - Using the VGA cable supplied by the monitor manufacturer to connect the VGA monitor.
 - Using the DVI-D cable supplied by the monitor manufacturer to connect the DVI-D monitor.
4. Connect the keyboard and the mouse to the USB ports.
5. Connect the microphone to the Audio Microphone In port.
6. Connect speakers to the Audio Line Out port.
7. Using the RJ-45 cable, connect one end to the Gigabit Ethernet port and the other end to Network.
8. Insert the 2.5" HDDs or SSDs into the storage slots.

Note: Since each vehicle differs in design, refer to the owner's manual of your vehicle for details and carefully follow the safety measures. If you are unsure about how to carry out the instructions, have the installation done by a properly trained technician.

3.1.1 Turning On and Turning Off the Power

When the hardware is properly connected, follow the below steps to turn on and turn off the power.

- A. If the unit is connected with a power adapter, press the power button to turn on the power. The Access Indicator LED (Figure 2-2) flashes red illumination. To turn off the power, just shut down the system.
- B. If the unit is connected with the ACC wire, start the vehicle to activate the unit. The unit will automatically start after you power on the vehicle. After 20 seconds later, the Access Indicator LED (Figure 2-2) flashes red illumination. After 70 to 80 seconds later, the unit will start recording. To turn off the power, power off the vehicle and the unit will automatically turn off within 1 minute.

Before recording, you need to format the storage drive and add it to the recording path of the system. For formatting the storage drive, see *3.2 Formatting the Storage Drive*. For adding the storage drive to the recording path, see *3.3 Adding the Storage Drive to the Recording Path*.

3.1.2 Connecting Dual Monitors

The GV-Mobile NVR supports dual-monitor display. You can connect two monitors by using the ports labeled below on the right panel of the unit.

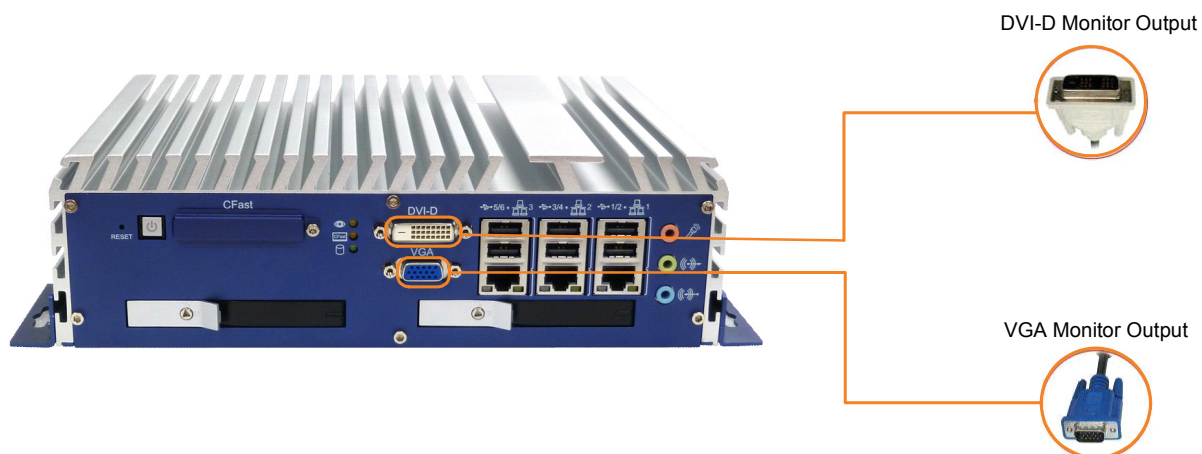


Figure 3-2

To install other required equipment, follow the steps in *3.1 Basic Installation*.

3.2 Formatting the Storage Drive

After installing HDD / SSD to your system, you will need to format the storage drive before use.

1. On the GV-Desktop, click the **Programs** button, and select **Disk Management**.

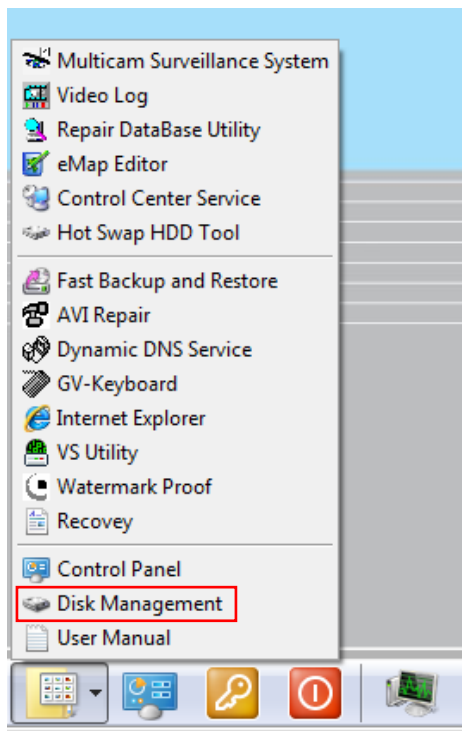


Figure 3-3

2. Type the ID and password in the dialog box. The default ID and password are "0000".

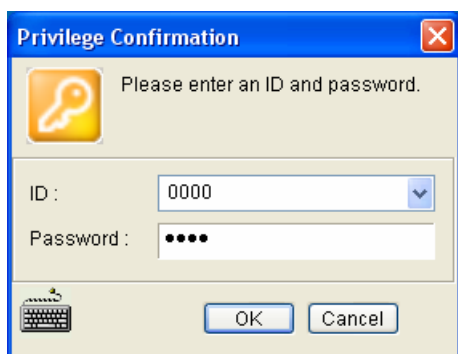


Figure 3-4

3. Right-click in the unallocated space of a new drive, and select **New Simple Volume**.

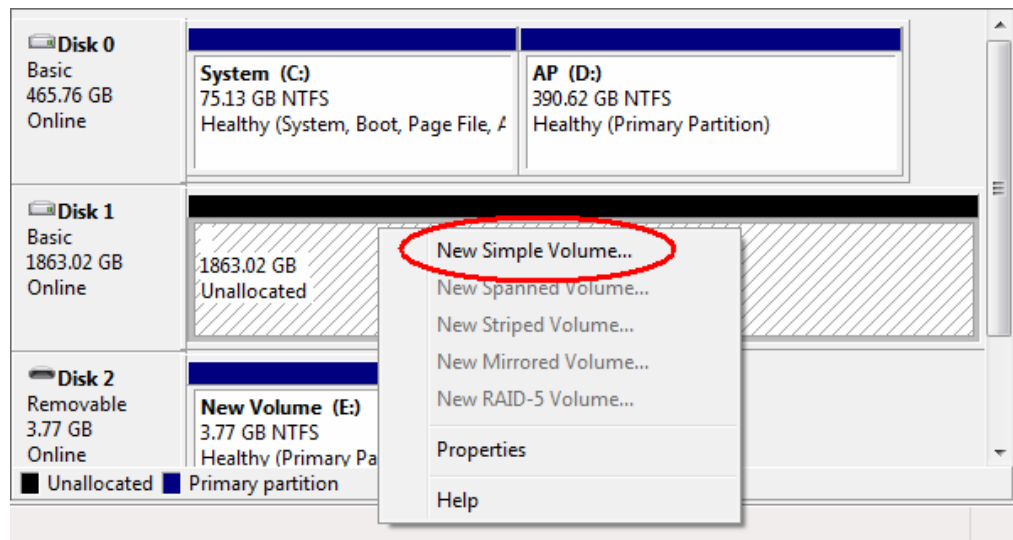


Figure 3-5

4. The New Simple Volume Wizard appears. Click **Next** to continue.

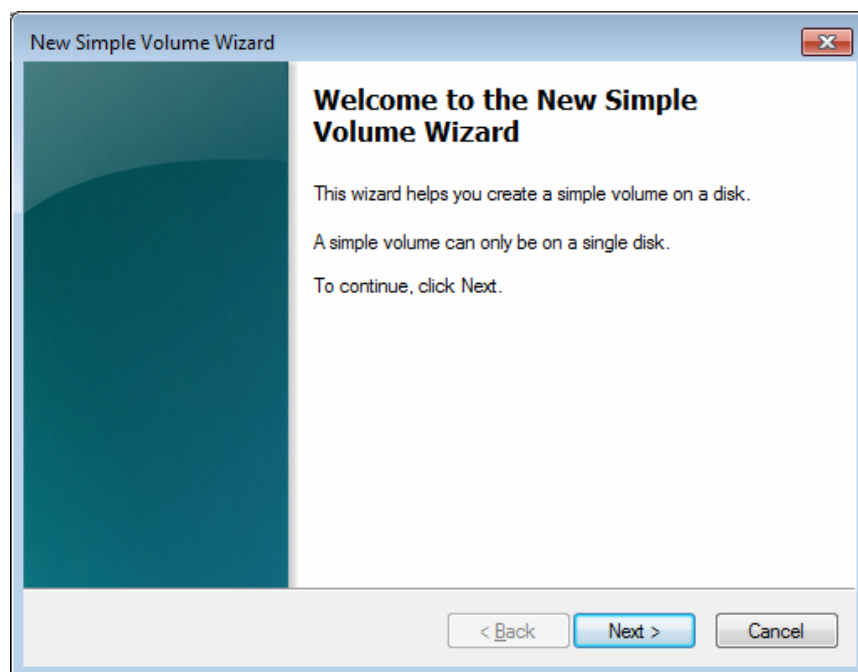


Figure 3-6

5. The default partition size is the same as the maximum disk space. Make changes if necessary. Click **Next** to continue.

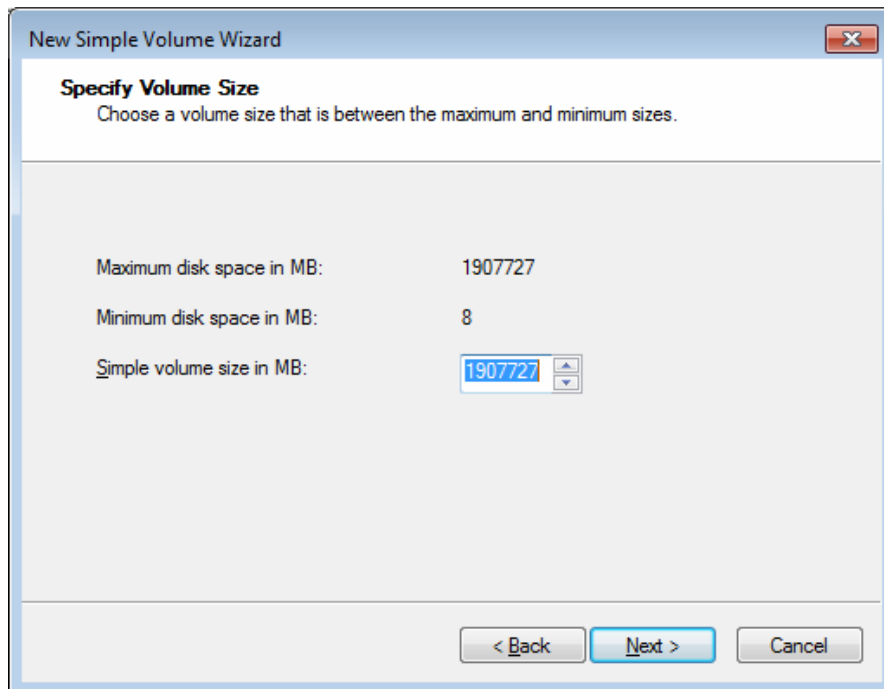


Figure 3-7

6. Assign a drive path that is not in use by other devices, and click **Next** to continue.

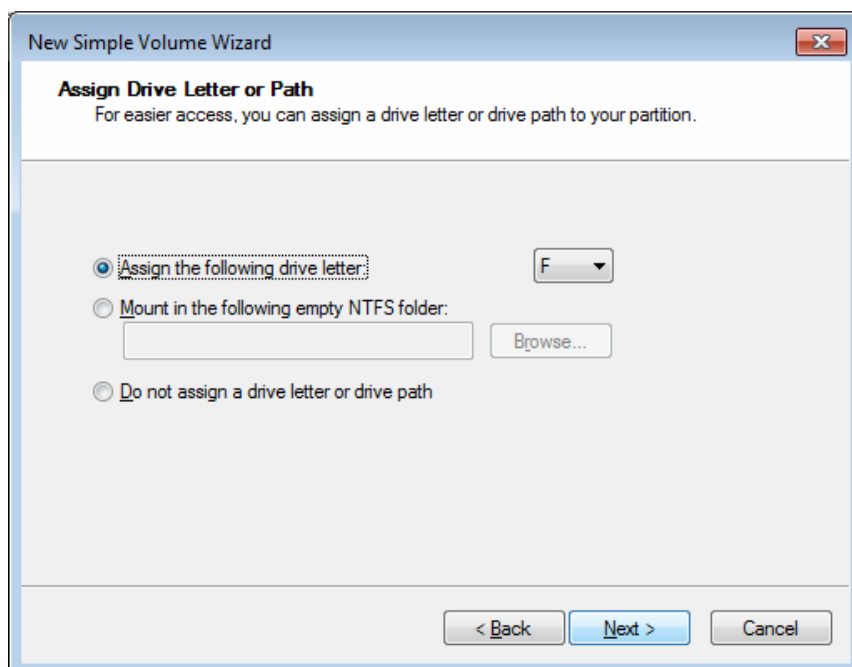


Figure 3-8

Note: The default drive path starts from D:\.

7. Type a name in the **Volume label** box, ex. HDD1, and click **Next** to continue.

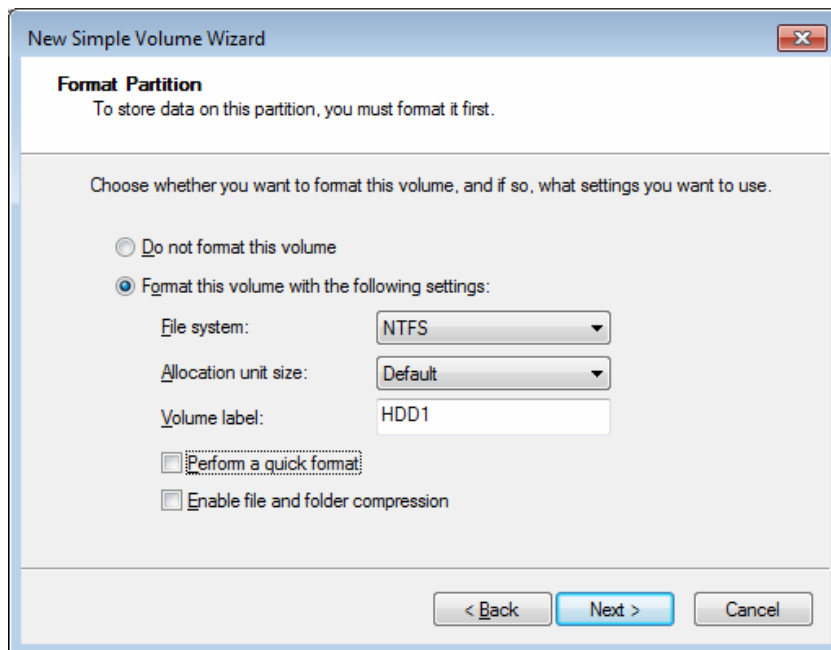


Figure 3-9

8. When the formatting is complete, click **Finish** to close the wizard.

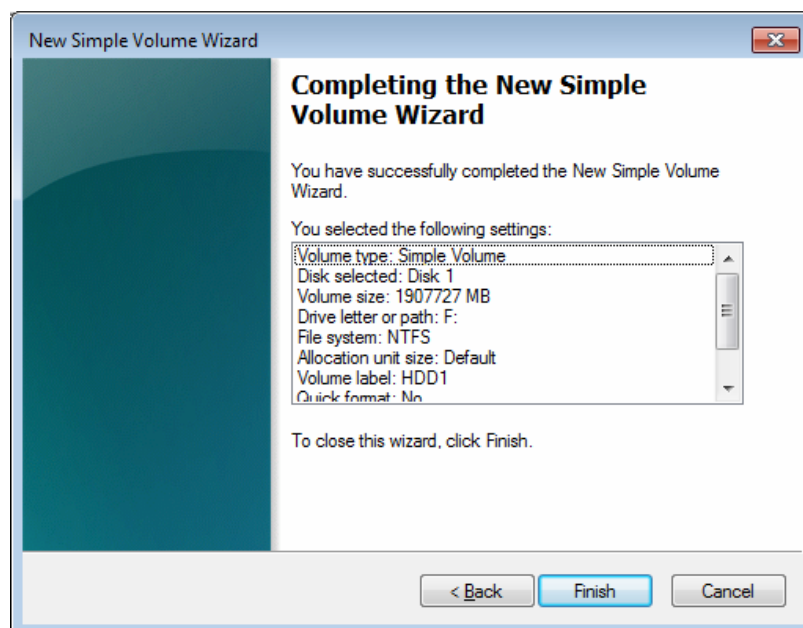


Figure 3-10

9. When the drive is successfully initialized, partitioned, and formatted, its status description should display “*Healthy*.”

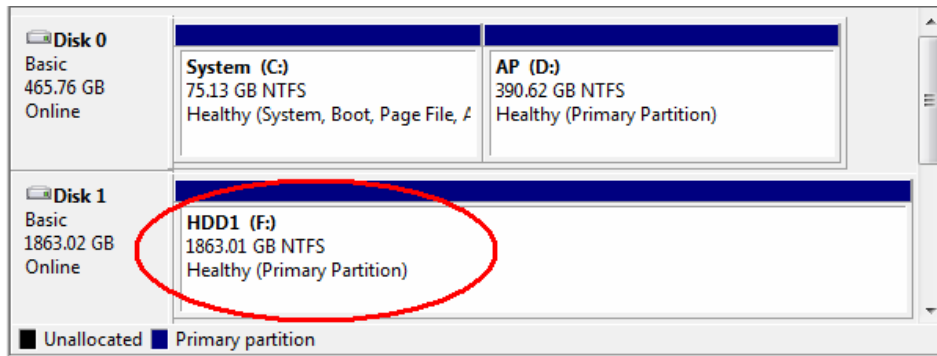


Figure 3-11

3.3 Adding the Storage Drive to the Recording Path

For GV-Mobile NVR, you need to add the formatted storage drives to the recording path before recording.

1. On the GV-Desktop, click the **Programs** button, and select **Hot Swap HDD Tool**. The MediaMan Tools window appears.

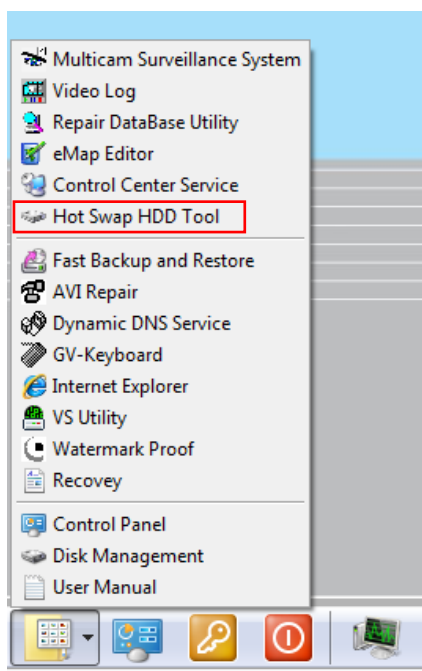


Figure 3-12

2. If a storage drive is already inserted, right-click it in the MediaMan Tools window, select **Add for recording**, and then select the storage group from the drop-down list.
3. If a storage is not inserted, follow these steps:
 - A. Insert a HDD / SSD or plug a USB storage device to the GV-Mobile NVR.

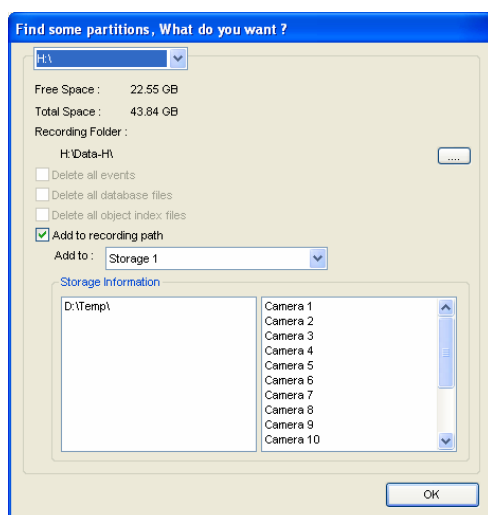


Figure 3-13

- B. Select **Add to recording path**, and select the storage group from the drop-down list.

Note: Storage 1 is the default storage group.

4. Click **OK** to automatically configure the storage drive to the recording path.
5. In the MediaMan Tools window, if the storage drive is successfully added to store data, its Status field should display “Standby”.

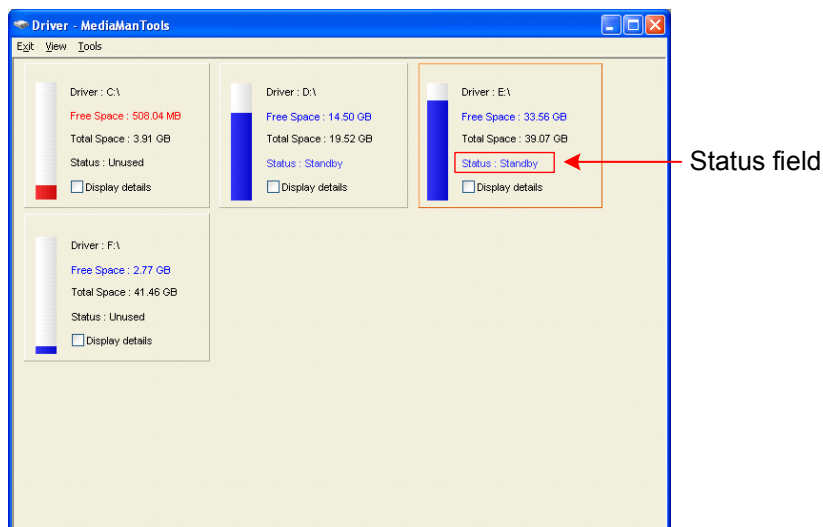


Figure 3-14

6. To add another formatted storage drive, repeat the above steps.

For the details on using Hot Swap HDD Tool, see *Hot-Swap Recording*, Chapter 11, *DVR User's Manual* (GV-Desktop < **Program** button < **User Manual**).

3.4 Replacing the Storage Drive

You can replace the HDD / SSD without shutting down the GV-Mobile NVR.

1. Stop the recording and wait for 30 seconds until the Storage Indicator LED (Figure 2-2) located on the right panel turns off.
2. Lift the handle. The HDD / SSD pops out.
3. Pull out the HDD or SSD completely. Remove it and replace it with a new one.
4. Push the handle until it locks.

Warning: Do not touch the top panel when you replace the storage drive. The top panel is a dissipation of heat and it may be extremely hot.

3.5 Setting Up On-Screen LED Panel

For GV-Mobile NVR, a LED panel on the screen provides a quick indication of the activity status of the storage drives.



Figure 3-15

LED Color	Description
Gray	- No storage drive is assigned to this LED. - The system is not started.
Green	A storage drive is assigned to this LED.
Red	The storage drive is full.
Flashing Green	The system drive is recording.
Flashing Red	The storage drive is recycling.

1. On the GV-Desktop, click the **Programs** button, and select **Hot Swap HDD Tool**.
2. Click **Tools** on the menu bar, and select **Setup LED Panel**. This dialog box appears.

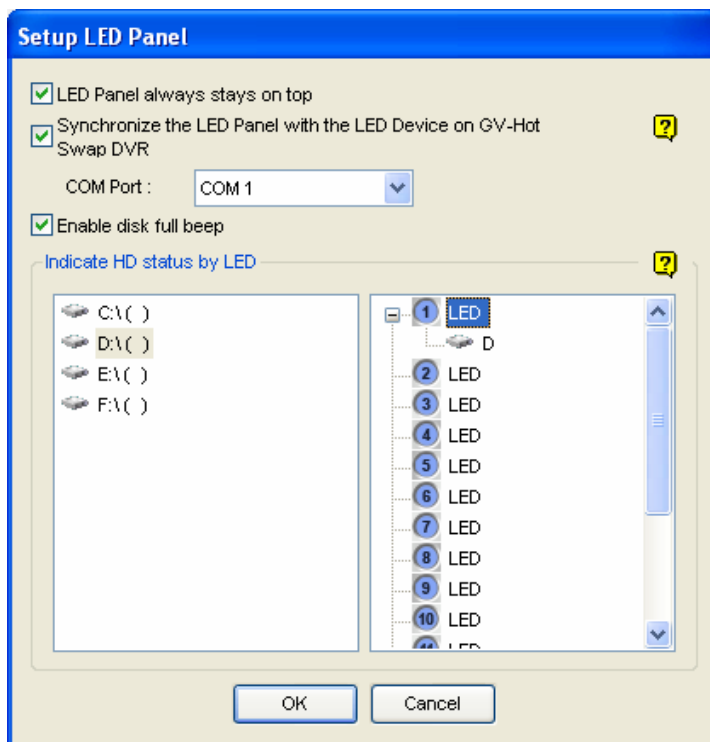


Figure 3-16

- **LED Panel always stays on top:** This option makes the LED panel stay on top of other windows when the Media Man Tools window is minimized.
 - **Synchronize the LED Panel with the LED Device on GV-Mobile NVR:** Not functional.
 - **Enable disk full beep:** When the storage drive is full, the system sounds on. Note this function only works when speakers are connected to the GV-Mobile NVR.
3. By default, only the hard disk drive D will be assigned to LED. If you want to re-assign the storage drive or assign other drives to LEDs, freely drag and drop the hard disk drive to the desired LED on the tree.
 4. Click **OK** to apply the settings, and minimize the MediaMan Tools window to display the LED panel on the screen.
 5. If you want to return to the MediaMan Tools window, right-click the LED panel and select **Switch to the setup window**.

Note:

1. Because the LEDs are designed to indicate the video and audio files are being written or read, it is not recommended to assign the storages that store log files to the LEDs.
 2. If the storage that stores log files is assigned to a LED and its LED turns red, make sure the log files are not being written before you remove it. Otherwise, the log files might be lost during the removal.
-

3.6 Configuring the IP Address

GV-Mobile NVR supports remote monitoring, control and configuration over a network connection. The following default IP addresses will automatically be assigned.

- **Connection 1: 192.168.0.200**
- **Connection 2: 192.168.0.201**
- **Connection 3: 192.168.0.202**

- **Default Subnet Mask: 255.255.252.0**

To change the above default IP addresses, follow the steps below.

1. On the GV-Desktop, click the **Programs** button, and select **Control Panel**.

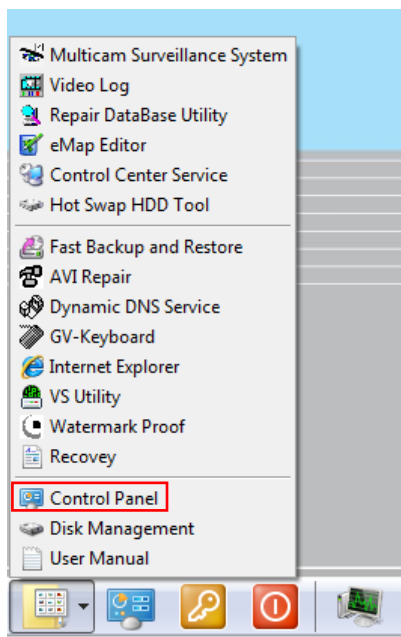


Figure 3-17

2. Type the ID and password. The default ID and password are “0000”. The Control Panel window appears.

3. Under Network and Internet, click **View network status and tasks**.

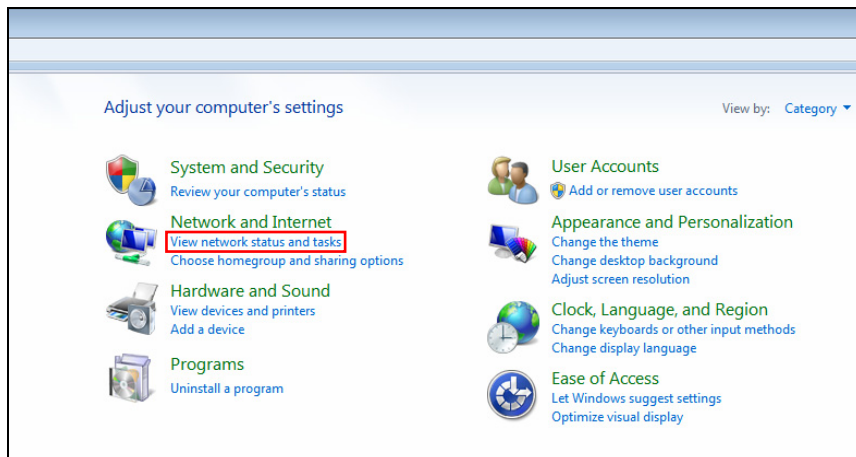


Figure 3-18

4. Under Connections, select the **Local Area Connection** you want to configure.

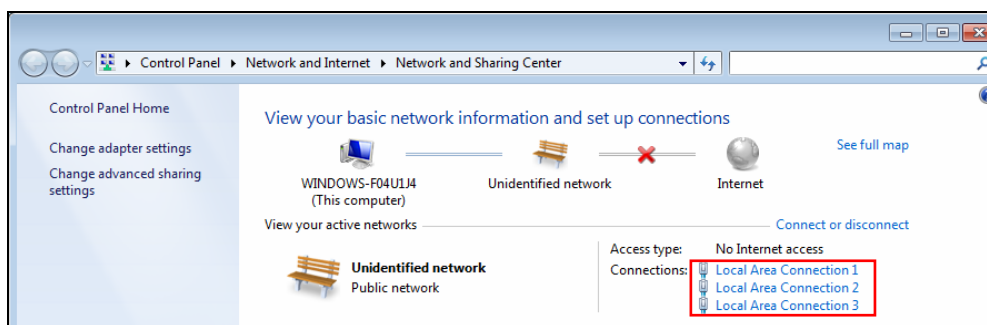


Figure 3-19

The local area connections listed correspond to the Ethernet ports as shown below:

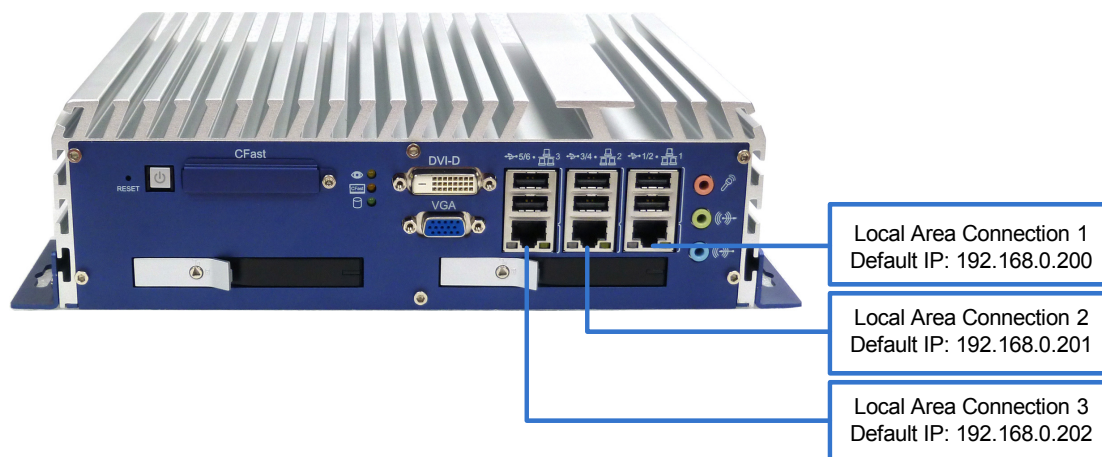


Figure 3-20

5. Select **Internet Protocol Version 4 (TCP/IPv4)**, and select **Properties**.

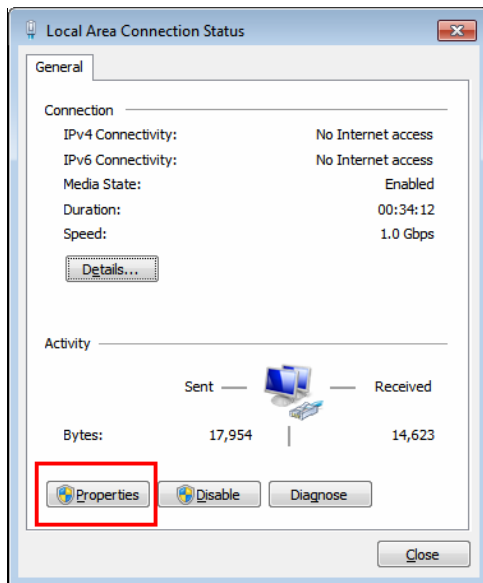


Figure 3-21

6. Select **Use the following IP address** and type the new IP information in the fields. Or select **Obtain an IP address automatically** to enable dynamic IP address.

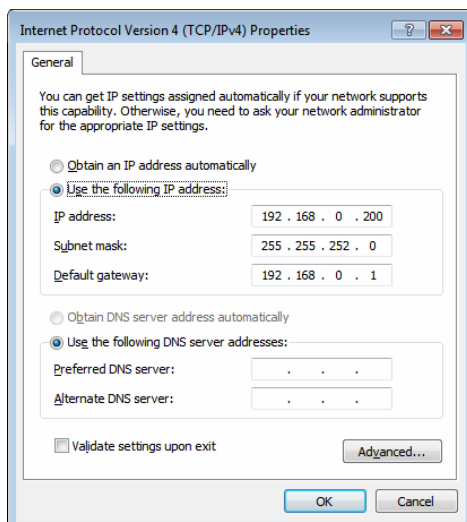


Figure 3-22

7. Click **OK** to finish the setting.

3.7 Exiting to Windows

GV-Mobile NVR is protected by GV-Desktop that is limited to run the selected programs. If you need to exit to Windows desktop, follow these steps.

1. Exit the main screen to display the GV-Desktop screen.



Figure 3-23

2. Click the **Settings** button, and type the valid ID and password. The default ID and Password are "0000". The Settings dialog box appears.
3. Under Desktop Type, select **Windows** from the drop-down list, and click **OK**.
4. Click the **Log Off** button, and type the ID and Password to display the Windows desktop.

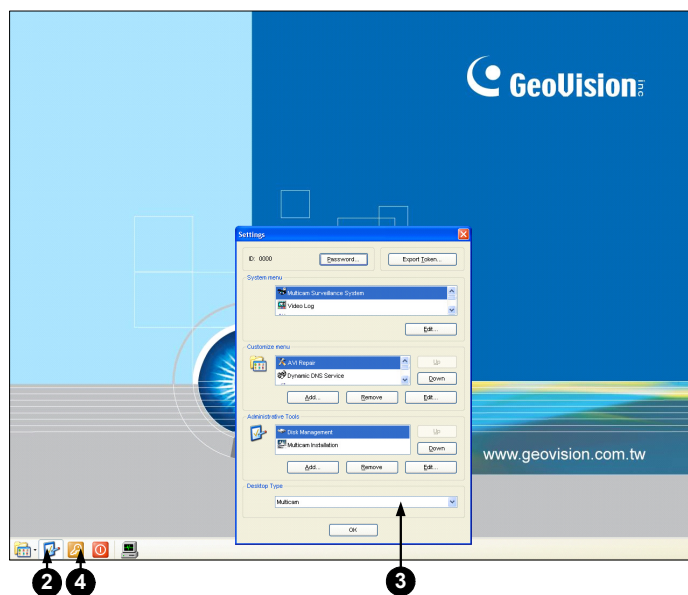


Figure 3-24 The GV-Desktop

3.8 Returning to GV-Desktop

To return to GV-Desktop, click the Windows **Start** button, point to **All Programs**, click **GV-NVR**, and click **Key Lock Utility**.

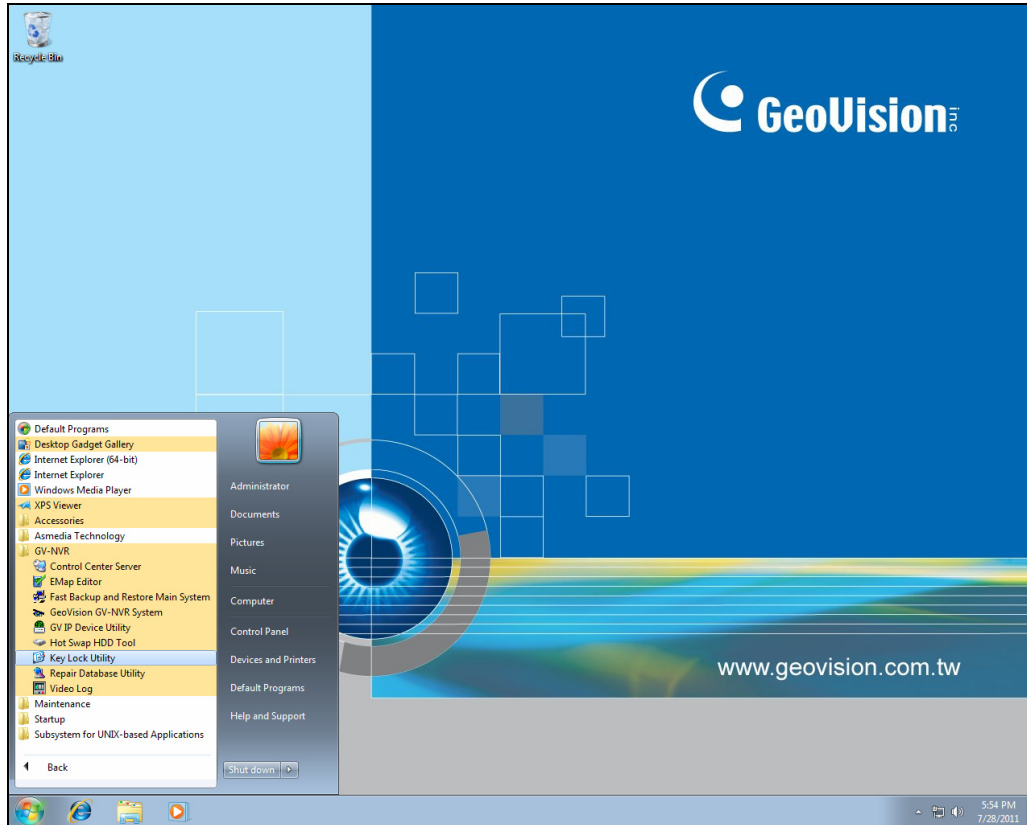


Figure 3-25

3.9 Twin View Display

You can display live view and play back video in two separated monitors.

1. Follow Steps 1 and 2 in 3.6 *Configuring the IP Address* to access the Control Panel window. See Figure 3-17.
2. In the Control Panel window, click **Adjust Screen Resolution** under the Appearance and Personalization section. This dialog box appears.

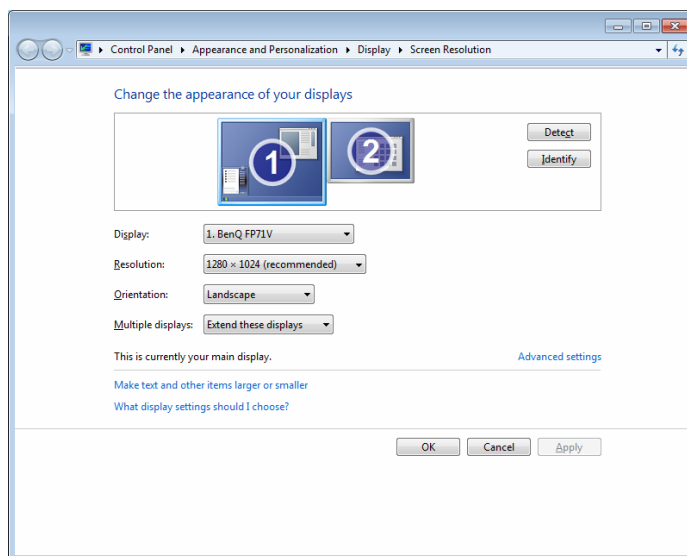


Figure 3-26

3. Click the **Display** list. If you do not see multiple monitors listed, check if your additional monitors are connected with the system properly.
4. Select the primary monitor from the list, and select **Make this my main display**.
5. Select additional monitors from the list, and select **Extend these displays** in the Multiple displays drop-down list.
6. Click **Identify**. Drag and drop the monitor icons to match the physical arrangement of your monitors.
7. Click **OK**.

8. Click the **Up** button on the toolbar, go to the system folder and locate **DMPOS.exe**.

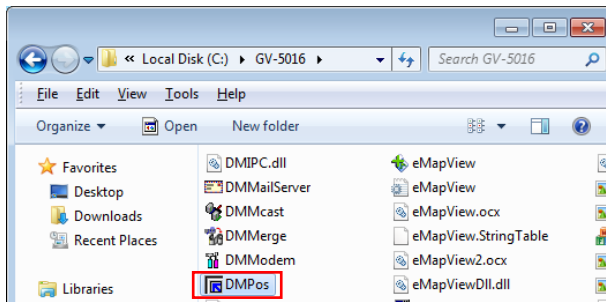


Figure 3-27

9. Double-click **DMPOS.exe**. The Set Application Function Position dialog box appears.

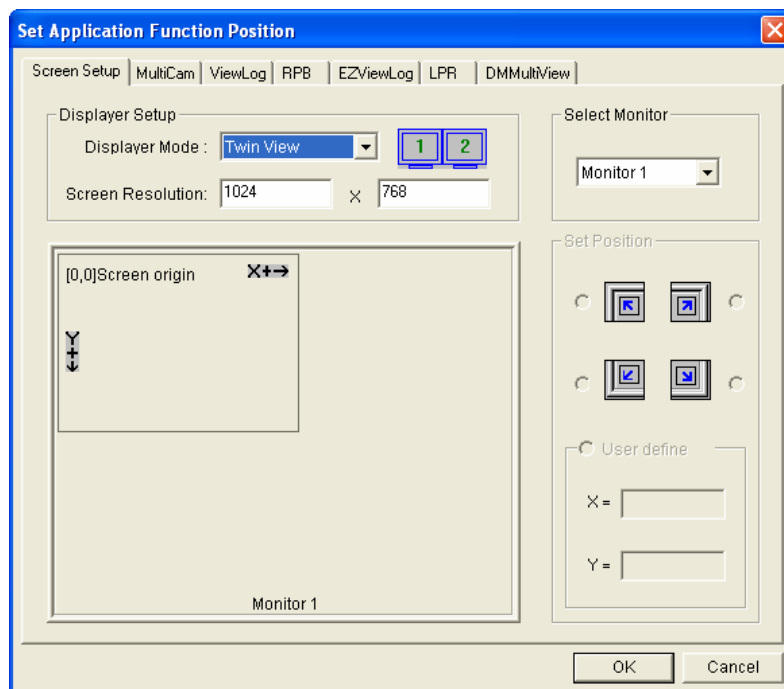


Figure 3-28

10. In the Screen Setup tab, select **TwinView** from the Displayer Mode drop-down list.
11. To define the live view monitor, in the MultiCam tab, select **Monitor 1** from the Select Monitor drop-down list.
12. To define the playback monitor, in the ViewLog tab, select **Monitor 2** from the Select Monitor drop-down list.
13. Click the OK button.
14. Exit and re-start the system. The live view should appear on monitor 1.
15. Click the **ViewLog** button on the main screen and select **Video/Audio Log** from the menu. The ViewLog player should appear on monitor 2.

3.10 Digital Matrix

To display multiple channels through two monitors, Digital Matrix is thus introduced to provide a method.

The Digital Matrix includes these features:

- **Live view:** You can set different live views and screen divisions for each monitor.
- **Automatic channel scan:** You can set up to 16 scanned pages with different screen divisions and channels for each monitor.
- **Pop-up Alert:** You can be alerted by pop-up live videos when motion is detected or I/O devices are triggered.

3.10.1 Activating Two Monitors

Use Windows Display Property to activate multiple monitors.

1. Follow Steps 1 to 6 in 3.9 *Twin View Display* to configure the second monitor.
2. Start the GV-System, click the **Configure** button, click **Accessories**, select **Digital Matrix Setting**, select monitors from the **Display** list and select **Activate** for each monitor. All monitors must be activated one by one.
3. Click **Apply**. Your additional monitor should now display the channels seen on the primary monitor.

3.10.2 Setting Live View

You can set different live views and screen divisions for each monitor.

1. On the main screen, click the **Configure** button, click **Accessories**, and select **Digital Matrix Setting**. This dialog box appears.

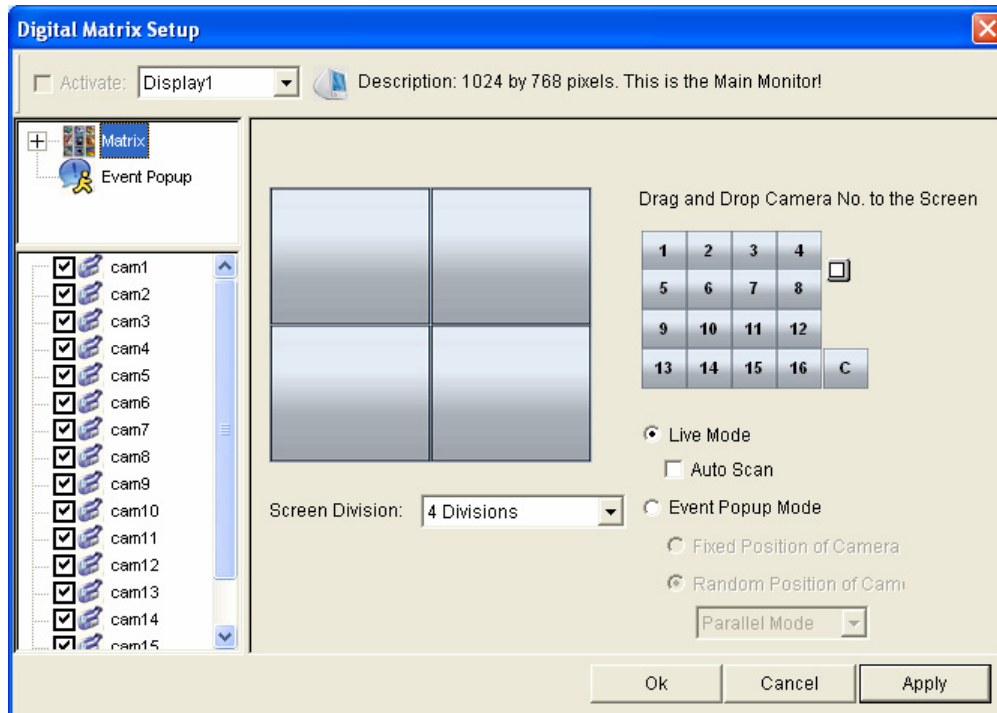


Figure 3-29

2. Use the **Display** list to select the monitor to be configured.
3. Select **Screen Division**.
4. Drag and drop the camera numbers to the desired positions on the divisions. To clear the assignment, drag and drop the "C" icon to that position.
5. Select **Live Mode**.
6. Repeat above steps to configure other monitors.
7. Click **OK** to apply the settings.

3.10.3 Setting Scanned Pages

You can set up to 16 scanned pages with different screen divisions and channels for each monitor.

1. Use the **Display** list to select the monitor to be configured.
2. In the upper-left column, expand the **Matrix** folder tree, and click **Page 1**. This page appears.

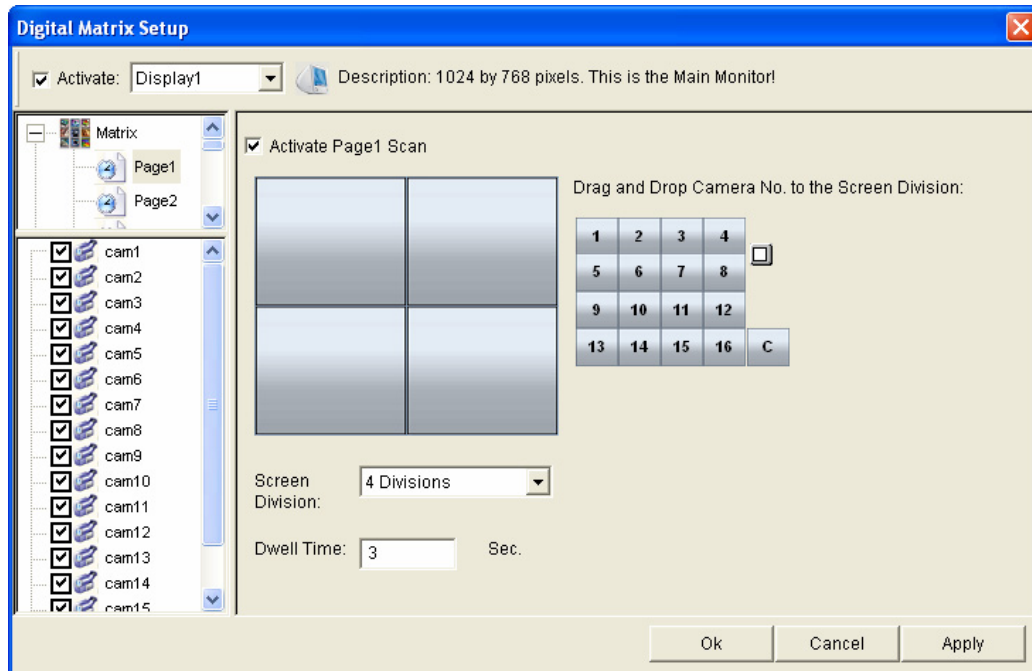


Figure 3-30

3. Select **Activate Page 1 Scan**.
4. Select **Screen Division**.
5. Drag and drop the camera numbers to the desired positions on the divisions. To clear the assignment, drag and drop the "C" icon to that position.
6. Specify **Dwell Time** for how long this scanned page remains on the monitor.
7. Repeat Steps 2 to 5 to configure more scanned pages for the specific monitor.
8. Repeat Steps 1 to 7 to configure scanned pages for the second monitor.
9. In the upper-left column, click the **Matrix** icon and return to Figure 3-29.
10. Select **Auto Scan**.
11. Click **OK** to start scanning among pages.

3.10.4 Setting Pop-up Alert

You can be alerted by pop-up live videos when motion is detected or I/O devices are triggered.

1. Use the **Display** list to select the monitor to be configured.
2. In the upper-left column, click **Event Popup**. This page appears.

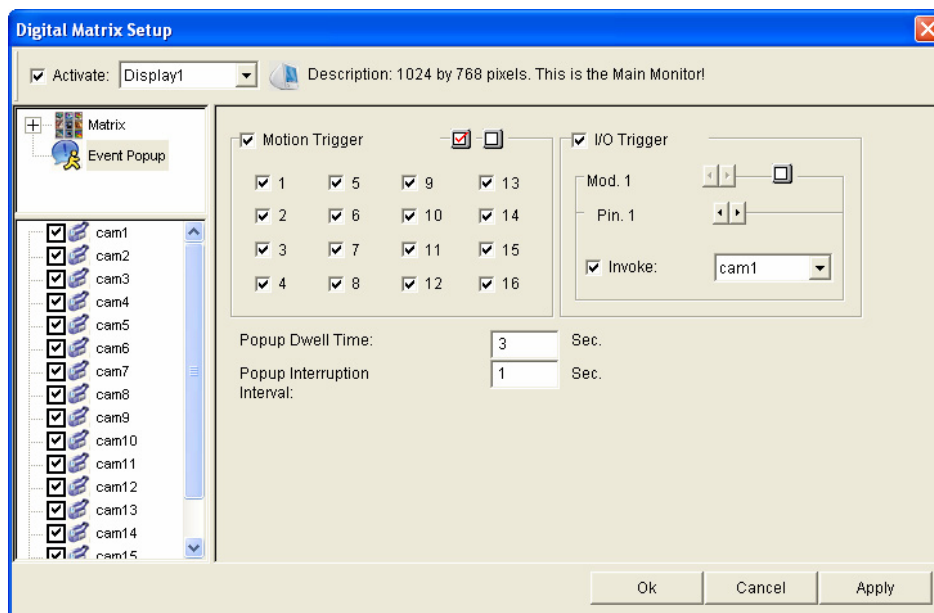


Figure 3-31

- **Motion Trigger:** The live video of selected cameras pops up when motion is detected.
 - **I/O Trigger:** The live video of assigned camera pops up when the selected input device is triggered.
 - **Popup Dwell Time:** Specify the amount of time that a pop-up live video remains in the foreground.
 - **Popup Interruption Interval:** Specify the interval between camera pop-ups. This option is useful when several cameras are activated for pop-up alert at the same time.
3. Use the **Display** list to select other monitors for setup.
 4. After above settings, click the **Matrix** icon and return to Figure 3-29.
 5. Select **Event Popup Mode**. Then select **Fixed Position of Camera** or **Random Position of Camera**. For these two options, see 3.10.4.1 *Setting Pop-up Positions*.
 6. Click **OK**.
 7. Start monitoring. When motion is detected or the input device is triggered, the live video will pop up for alert.

3.10.4.1 Setting Pop-up Positions

When you select **Random Position of Camera**, you can decide the positions for pop-up cameras.

- **Fixed Position of Camera:** The cameras pop up in their assigned positions. To assign positions, select **Screen Division**. Then drag and drop the cameras number to the desired positions on the divisions.
- **Random Position of Camera:** The positions of pop-up cameras are based on the sequence order of triggers. There are two modes for this position:
 1. **Cascade Mode:** This mode can avoid the same cameras popping up on different monitors. This is suggested to be used when multiple monitors are placed close to each other.

Example:

Camera 1, Camera 2, Camera 3, Camera 4 and Camera 5 are assigned for pop-up alert on both Monitor 1 and Monitor 2. Monitor 1 is set at 4 screen divisions. When the five cameras are triggered at same time, the first 4 cameras show up on Monitor 1 and the 5th on Monitor 2.

<table border="1"> <tr> <td>1</td><td>2</td></tr> <tr> <td>3</td><td>4</td></tr> </table>	1	2	3	4	<table border="1"> <tr> <td>5</td><td></td></tr> <tr> <td></td><td></td></tr> </table>	5			
1	2								
3	4								
5									
Monitor 1	Monitor 2								

2. **Parallel Mode:** This mode allows the same cameras simultaneously pop up on different monitors. This is suggested to be used when multiple monitors are placed in separate rooms.

Example:

Camera 1, Camera 2, Camera 3 and Camera 4 are assigned for pop-up alert on both Monitor 1 and Monitor 2. When the four cameras are triggered at the same time, they will show up simultaneously on both Monitor 1 and Monitor 2.

<table border="1"> <tr> <td>1</td><td>2</td></tr> <tr> <td>3</td><td>4</td></tr> </table>	1	2	3	4	<table border="1"> <tr> <td>1</td><td>2</td></tr> <tr> <td>3</td><td>4</td></tr> </table>	1	2	3	4
1	2								
3	4								
1	2								
3	4								
Monitor 1	Monitor 2								

3.10.5 Setting Live View with Pop-up Alert

You can set a different live view mode with pop-up alert together for each monitor. When alert events occur, the live video of the associated camera will pop up on the assigned monitor to replace its live view mode.

1. To configure live view mode, follow the instructions in *3.10.2 Setting Live View*.
2. To configure pop-up alert, in the upper left column, click **Event Popup**. Figure 3-31 appears.
3. Configure **Motion Trigger**, **I/O Trigger**, **Popup Dwell Time** and **Popup Interruption Interval** for each monitor. For details, see *3.11.4 Setting Pop-up Alert*.
4. Click the **Matrix** icon and return to Figure 3-29. Ensure the **Live Mode** option is selected.
5. Click **OK**. The live view mode you configured for each monitor is displayed.
6. Start monitoring. When alert events occur, the associated camera will pop up on the desired monitor.

3.11 System Restoration

If preinstalled files are damaged, use the supplied Recovery DVD to restore them. To restore the operating system and all preinstalled software, prepare an external USB DVD drive or a USB flash drive to do it.

Note: After recovery, you need to re-install all settings and passwords. But the recovery will not delete your recording files saved on the GV-Mobile NVR since it only reformats the partition C and all of your files are still stored on other partitions.

3.11.1 Using an External DVD Drive

1. Connect an external DVD drive to the USB port on the unit.
2. Remove or turn off the power of other connected USB devices.
3. Insert the Recovery DVD and restart the system. The Windows Boot Manager appears.

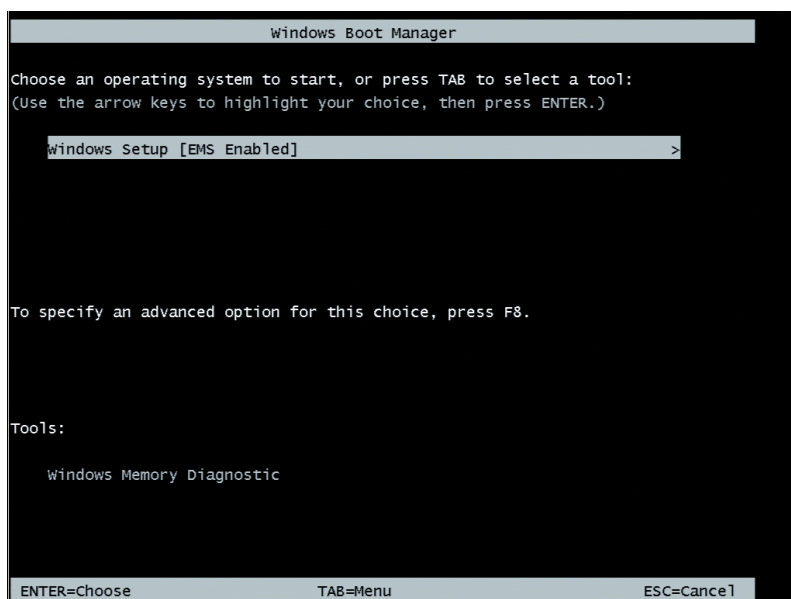


Figure 3-32

4. Press **Enter** to start the Recovery Wizard.

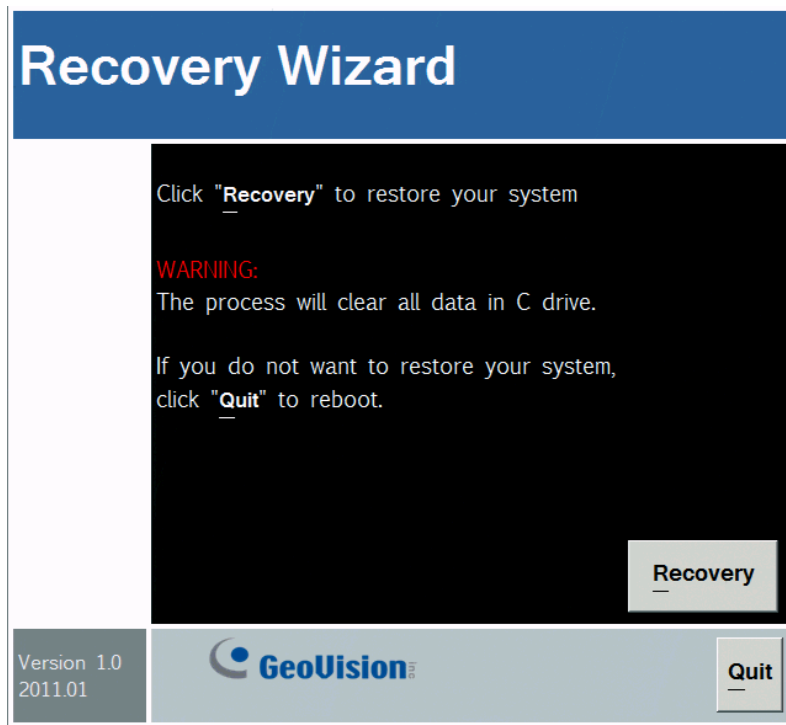


Figure 3-33

5. Click the **Recovery** button.
6. The message "Are you sure you want to recover your system? This process will delete all data on your C drive." appears. Click **Yes**.

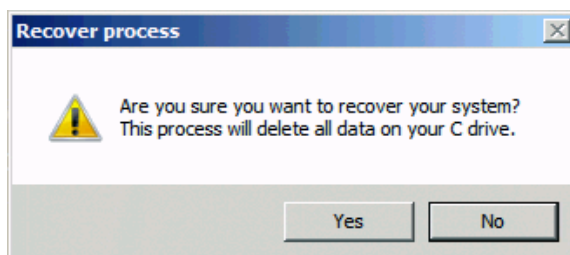


Figure 3-34

7. This message box appears when the recovery begins.

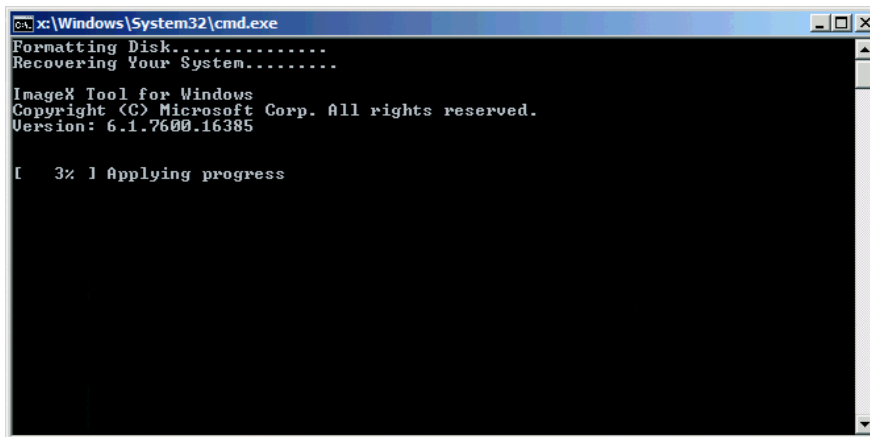


Figure 3-35

8. When the recovery is completed, the message “*The system has been recovered successfully*” will appear. Click **OK**.

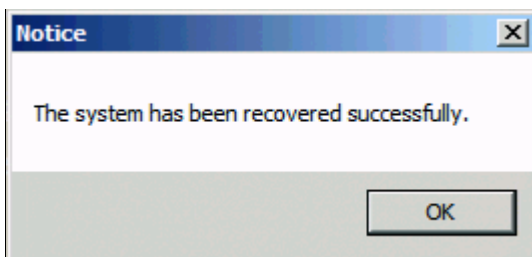


Figure 3-36

9. Remove the external DVD drive.

3.11.2 Using an External USB Flash Drive

You could transfer the recovery content from the Recovery DVD to an external USB flash drive. By doing so, you need to follow the below steps to empower the external USB flash drive with booting function. The following steps should be executed on a PC.

1. Insert Recovery DVD to the PC.
2. Create a new folder “test” in a root directory, e.g. Z:\test.
3. Copy and paste the recovery content from the Recovery DVD to this newly created folder.
4. Use an external USB flash drive, e.g. G:, and format it.

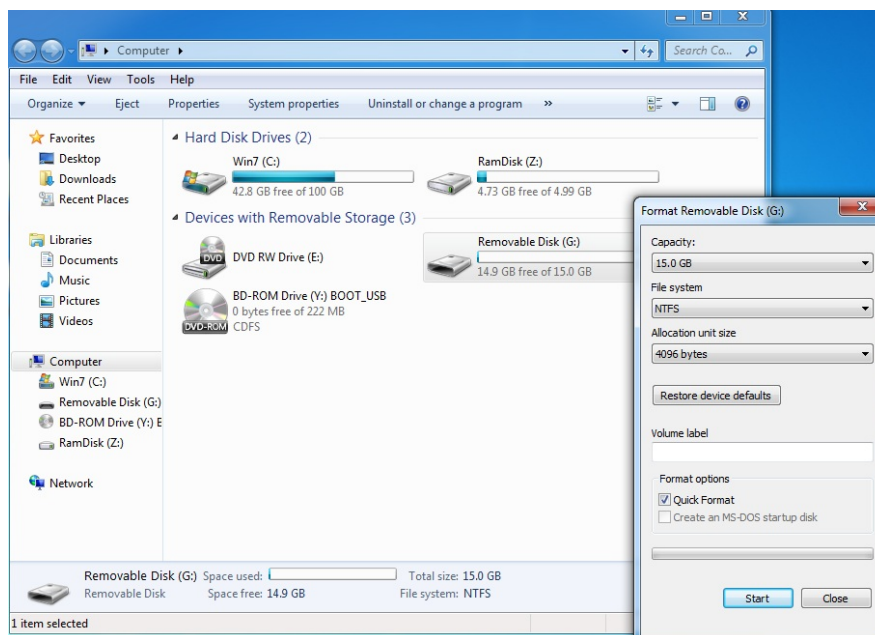


Figure 3-37

5. Type “cmd” in the Run box to open up the command prompt.

6. In the command prompt, type the partition where you save the recovery content (e.g. **Z:**). Type a path to enter the boot folder (e.g. **cd \test\boot**). Type the command to create the booting function for the USB flash drive (e.g. **bootsect /nt60 [partition of USB flash drive:]**). Close the command prompt after finishing entering the commands.

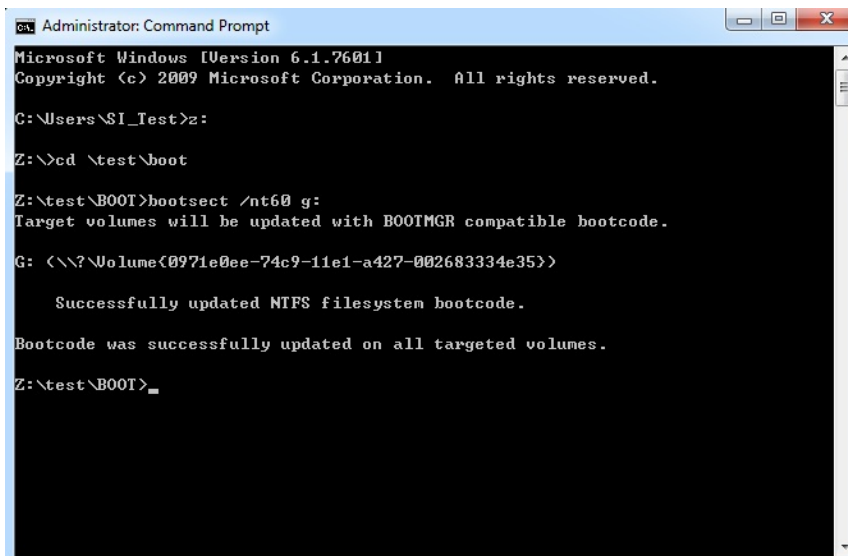


Figure 3-38

7. Copy the recovery content from the partition Z and paste the data to the USB flash drive.
8. Plug the USB flash drive to the unit.
9. Turn on the unit and press the F2 hot key to enter the BIOS page.
10. Use the arrow button to select the **Boot** tab. Use the arrow button to highlight the **USB HDD**. Use the “+” button to move the highlighted **USB HDD** upward to the top of the Boot Priority Order.

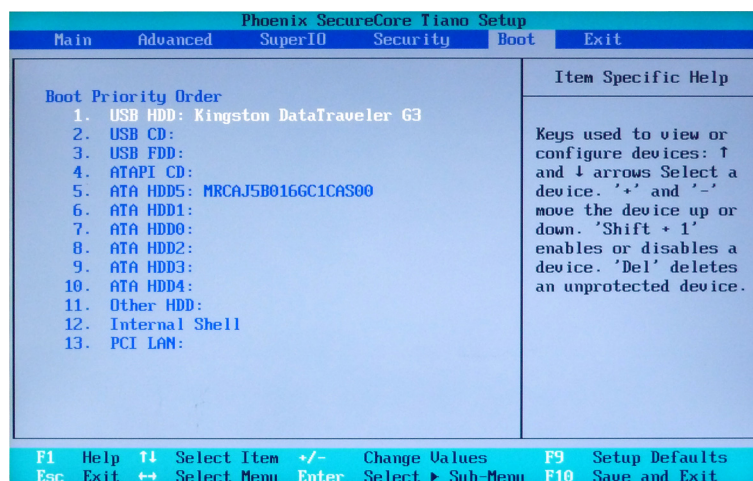


Figure 3-39

11. Press F10 to save the setting. The system will restart automatically.
12. Repeat Steps 3 to 9 in 3.11.1 Using an External DVD Drive to complete the recovery.

3.12 Updating GV-Mobile NVR

If you like to update your GV-Mobile NVR, contact your dealer for more information.

Before contacting your dealer, you may check software update news at our website:

<http://www.geovision.com.tw>

Chapter 4 Health Analysis

GeoVision offers health analysis to GV-Mobile NVR. The service is intended to give diagnosis for early and immediate detection of problems.

It is recommended to have the health analysis during the first week after you install the GV-Mobile NVR, and then have the checkup every three months. It will take 5 working days for response.

Please prepare the following data for analysis, and send to dvrssystem@geovision.com.tw

- **System Settings**
- **System Log**
- **Information of your computer system (Processor; Drives; Voltage, Temperature and Fans)**

4.1 System Settings

Please back up your system configurations using the **Fast Backup and Restore** application.

1. Run **Fast Backup & Restore Main System** from the Start menu.

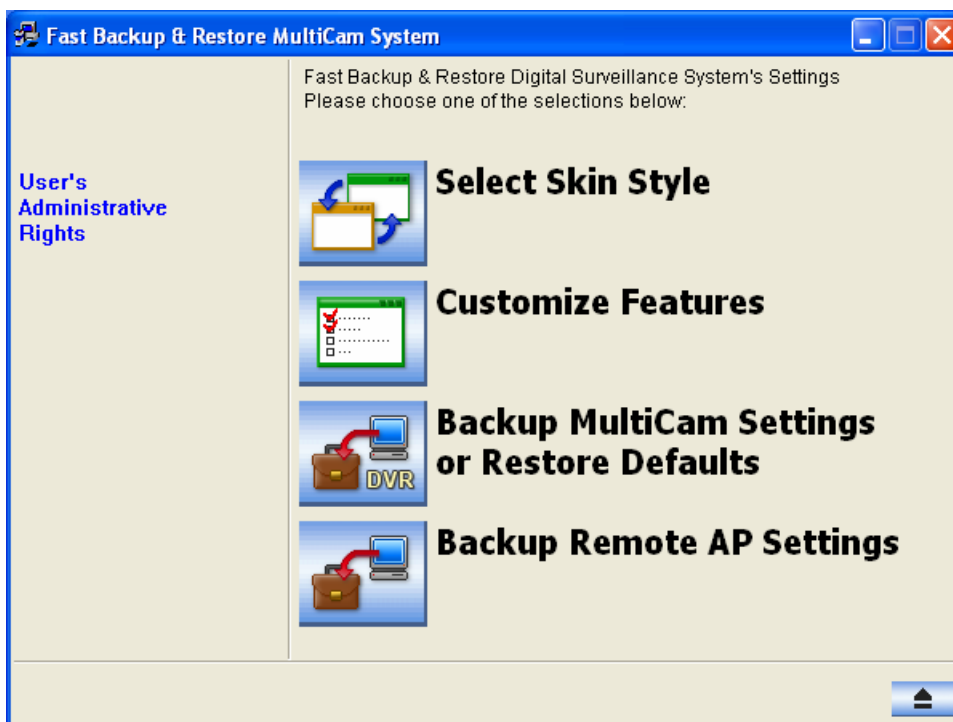


Figure 4-1

2. Select **Backup MultiCam Settings or Restore Defaults**, and select **Backup Current System**. This dialog box appears.

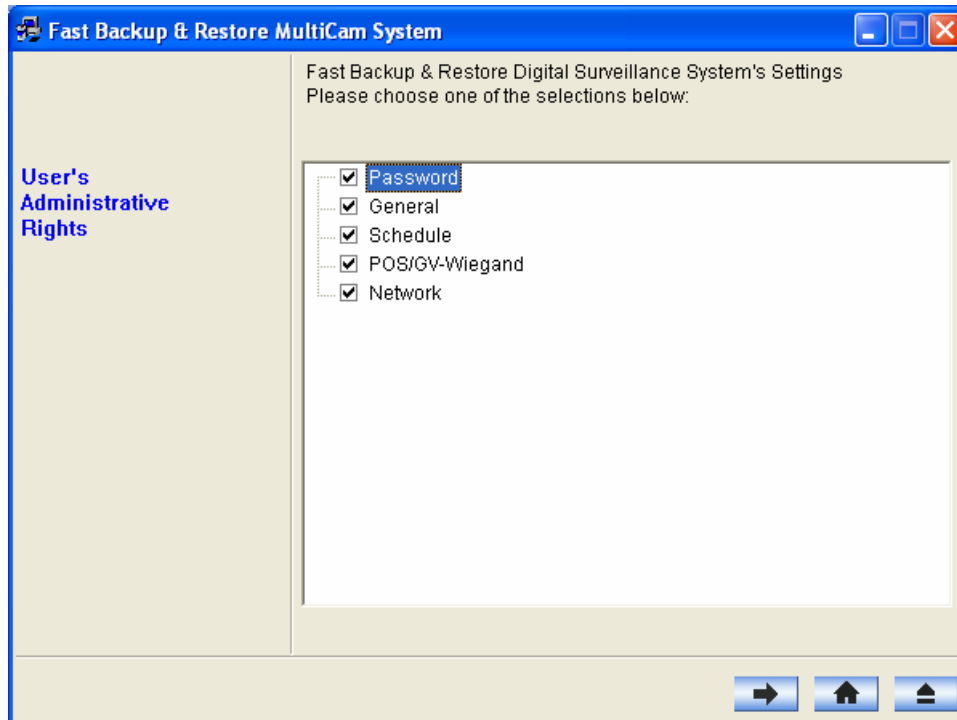



Figure 4-2

3. Press the **Next Step** button  to back up all your system settings. The Save As dialog box appears.
4. Select the destination drive to store the backup file. When the backup is complete, this message "*Successfully Backup MultiCam System Settings*" will appear.

4.2 System Log

Please provide the **sys*.mdb** files of system log. The files by default are saved at **C:\GV folder\database**. If you have modified the default location, you can check the path by the following steps:

1. Click the **Configure** button on the Main System, select **System Configure**, and then select **System Log Setting**. This dialog box appears.

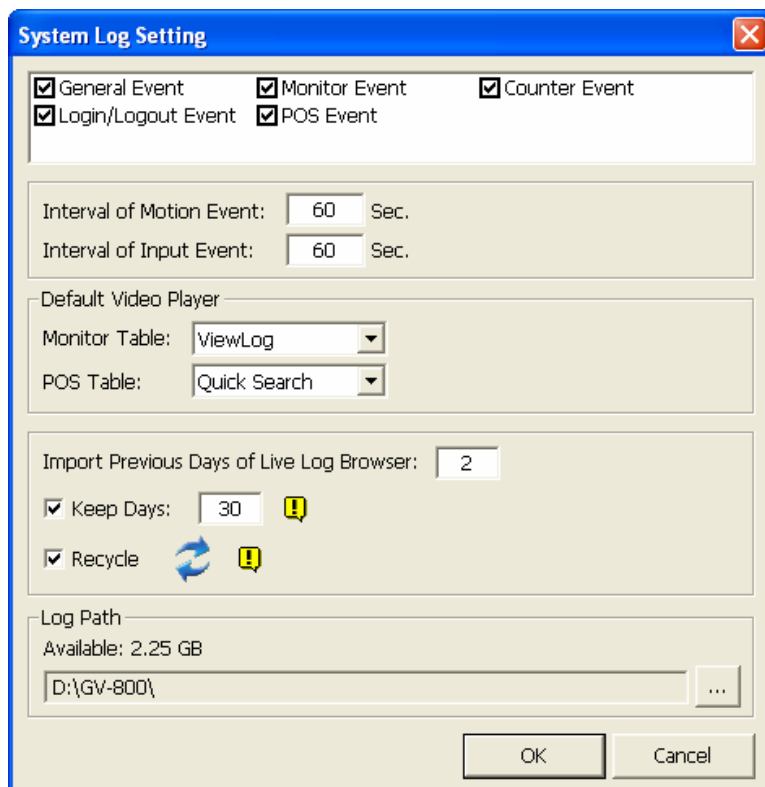



Figure 4-3

2. The location of your system log is listed after **Log Path**.

4.3 Information of Your Computer System

To get the information of your computer system, please follow the steps below to install the free software PC WIZARD. By using the software, the following computer information can be easily collected and saved for analysis:

- **Processor:** includes Type, Frequency, Data Cache L1, Trace Cache L1, Cache L2, Voltage, Processor Temperature, FPU Coprocessor.
- **Drives:** includes Number of Hard Disk, Number of Drive, Total Size and Free Space of Drive.
- **Voltage, Temperature and Fans:** includes Monitoring Chip, Voltage CPU, Chassis Fan, Processor Temperature, Mainboard Temperature, Hard Disk Temperature.

1. Download and install **PC WIZARD** from <http://www.cpubid.com/pcwizard.php>.
2. After installation, run the program.
3. Right-click the **Processor** icon  and click **Save as**.

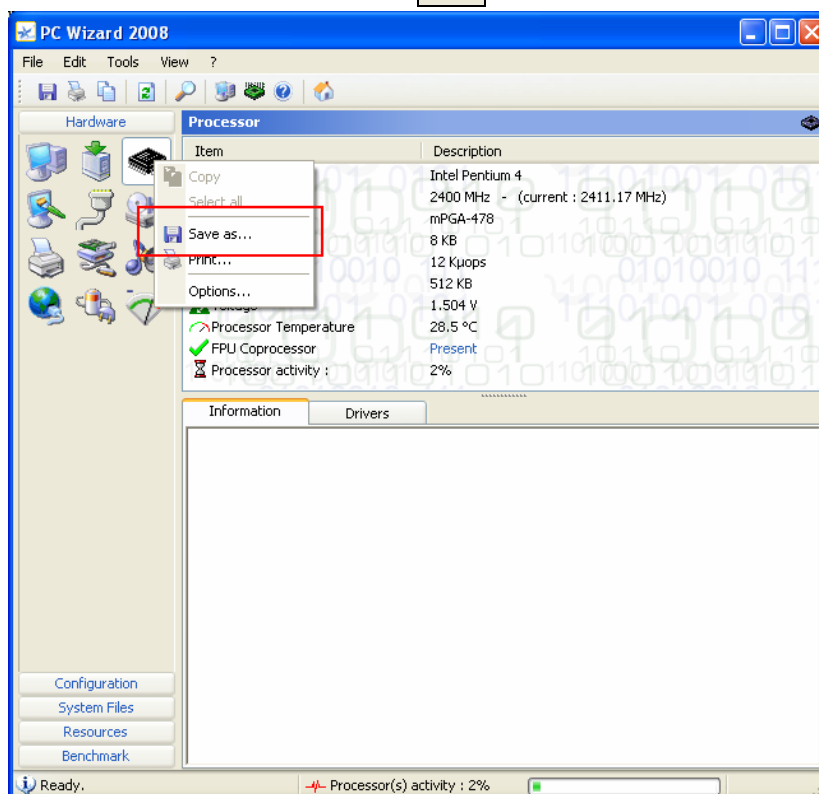


Figure 4-4

4. In the Save As dialog box, select **Format HTML** and click **OK**.

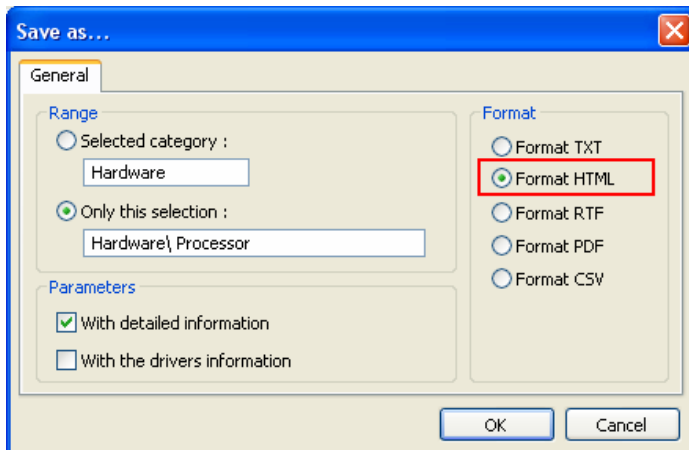




Figure 4-5

5. Select the Save location, type the file name, and then click **Save** to save the Processor information as HTML file.
6. Repeat Steps 3-5 to save the **Drives** information  as HTML file.
7. To save the **Voltage, Temperature and Fans** information , please follow these steps:
- Click the **Voltage, Temperature and Fans** icon. The related data is displayed at the right window.
 - Click the first item **Monitoring Chip**.
 - Click **Edit** on the menu bar and click **Select All** to highlight all the contents.
 - Click **Edit** on the menu bar and select **Copy**.
 - Open a Notepad. Paste and save the information to TXT file.

4.4 Health Analysis Form

Please send the related data for analysis along with this Health Analysis Form to dvrssystem@geovision.com.tw.

Health Analysis of GV-Mobile NVR System	
Contact Person:	Title:
Company Name:	
Telephone: (O)	(H)
Fax:	
E-Mail:	
Model:	
Bar Code:	

4.5 Check List

Read this check list before submitting the health analysis request:

- System Settings- **EXE file**
- System Log- **sys*.mdb**
- Computer System- Processor information of **HTML file**
- Computer System- Drives information of **HTML file**
- Computer System- Voltage, Temperature and Fans information of **TXT file**
- Health Analysis Form

Chapter 5 Troubleshooting

GV-Mobile NVR storage drive corrupts.

If you are experiencing file system corruption problems, such as lost clusters, cross-linked files or invalid files or directories, try these steps:

1. Use the **HD Tune** utility to scan the storage drive for errors. Follow these steps:
 - A. Download and install **HD Tune** from <http://www.hdtune.com/>
 - B. Click the **Error Scan** tab and click **Start** to scan. Any found defects will be shown as red blocks (see Figure 5-1).

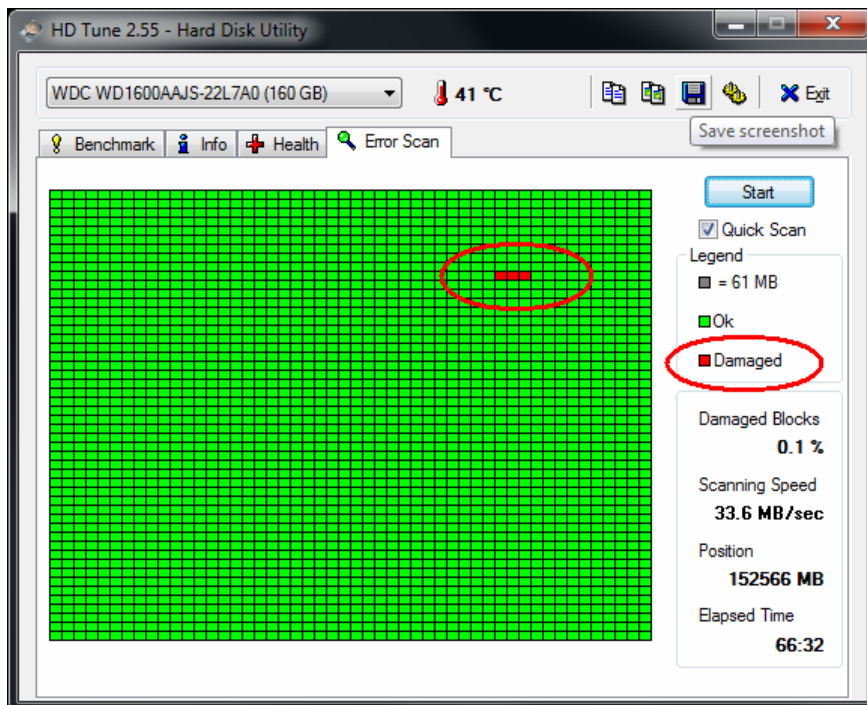


Figure 5-1

- C. If your storage drive is damaged, replace a new one.

2. If the HD Tune utility does not find any defects, use the Windows built-in utility to attempt to fix the errors. Follow these steps:
 - A. On the GV-Desktop, click the **Programs** button, and select **Disk Management**. See Figure 3-3.
 - B. Right-click the desired storage drive and select **Properties** from the file menu to display the Properties window.

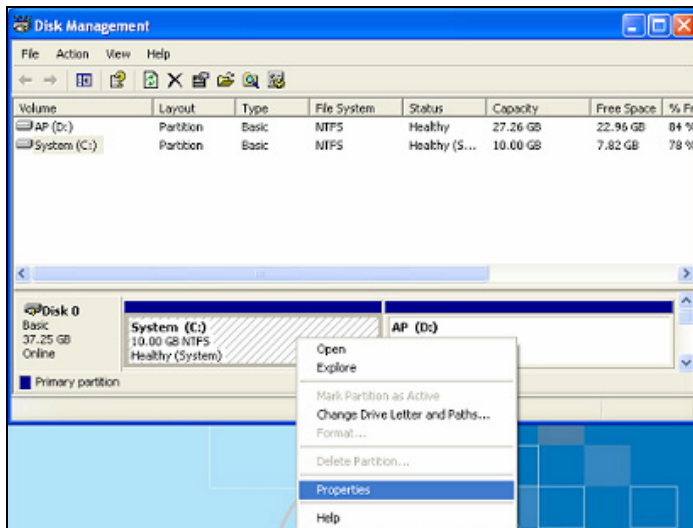


Figure 5-2

- C. Click the **Tools** tab in the upper portion of the window.
- D. Under Error-checking, click the **Check Now** button.

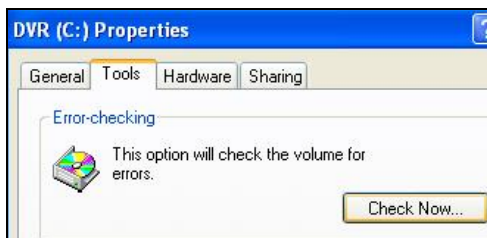


Figure 5-3

- E. Select **Automatically fix file system errors** and **Scan for and attempt recovery of bad sectors**.

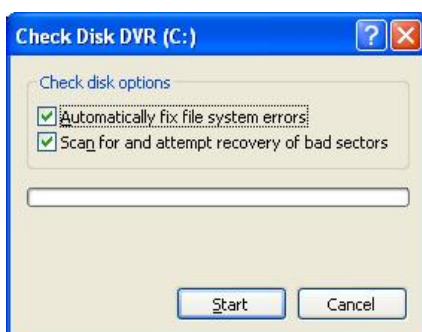


Figure 5-4

- F. Click **Start**.

3. If the Windows hard disk utility still cannot fix the problem in Partition C, try rebuilding the operating system and GV-System Software by using the Recovery DVD. Refer to 3.11 *System Restoration*.

Live video is not displayed smoothly.

If some of live videos are not displayed smoothly, check the following status:

1. Check the bandwidth status of the network that is connected to the GV-Mobile NVR.
2. Check if several users are accessing the Web interface of the GV-IP camera. Try to close some of open Web interfaces.

Unable to locate all the GV-IP cameras by using the IP Device Utility.

If you can not locate all the GV-IP cameras by using the IP Device Utility, try the following instructions:

1. Ensure all the GV-IP cameras are connected to the same LAN with the GV-Mobile NVR and check the network connectivity.
2. Ensure you have powered on all the GV-IP cameras.
3. Click the Search button of the IP Device Utility again to detect the GV-IP cameras.

Black images are displayed.

1. Check the IP cameras and make sure they are functioning well.
2. Check the GV-Mobile NVR's connection over network.

How can I find more help?

1. Visit our website at http://www.geovision.com.tw/english/4_1.asp
2. Write us at dvrssystem@geovision.com.tw

Specifications

GV-Mobile NVR System

Hardware

System		
CPU		Intel Core i5 Processor
RAM		4 GB Dual Channels
OS		64-bit Windows Embedded Standard 7 SP1
Internal Storage		16 GB (CFast)
No. of HDD		2.5" Hot Swappable HDD / SSD x 2
Connector	Ethernet	RJ-45, 10 / 100 / 1000 Mbps x 3
	Video Output	VGA, DVI-D
	USB 2.0	6 ports
	ACC	2-pin terminal block
	Serial Port	4 ports
	eSATA	2 ports
	Power	2-pin terminal block for vehicle connection, DC power port
Power Adaptor	Input	100 ~ 240 V (50 ~ 60 Hz)
	Output	DC 90W, 24V, 3.75A
ACC Power		DC 6 ~ 36V
Environment		
Operating Temp.	HDD	0°C ~ 40°C / 32°F ~ 104°F
	SSD	0°C ~ 60°C / 32°F ~ 140°F
Humidity		0 ~ 80% RH (non-condensing)
Physical		
Color		Silver
LED Indicator		Yes (Failure, Access, Storage)
Dimensions (W x H x D)		260 x 78.2 x 175 mm / 10.24 x 3.08 x 6.89 in
Net Weight		2.74 kg / 6.04 lb (± 0.5 kg / 1.1 lb)
Operating Shock		30 G; 11ms
Operating Vibration		4.48 G (0 ~ 500 Hz)

Software

Video and Audio	
Video Standard	NTSC, PAL
Video Input	32 channels
Audio Input	32 channels
Video Codec	MJPEG / MPEG4 (ASP) / H.264
Audio Codec	AAC (32 kHz / 16 bit)
Live View and Playback	
Image Control	Contrast / Brightness / Saturation / Hue
Recording Mode	Round the Clock / Motion Detection / Sensor Detection / Pre & Post Recording / Schedule Recording
Pre Recording	1 ~ 45 min.
Instant Playback	10 sec. / 30 sec. / 1 min. / 5 min.
Watermark	Support
Search and Backup	
Search Method	Date / Time / Camera / Event type
Backup Type	DVD+R (DL) / DVD-R (DL) / DVD+R / DVD+RW / DVD-R / DVD-RW
Note: For backup function, you need to connect an external USB DVD/CD burner.	
Remote Monitoring	
Monitoring Environment	Web browser (IE, Chrome, Firefox and Safari) Mobile device (Android Smartphone and tablet; iPad, iPhone and iPod Touch)
Live View	Max. 32-channel multi views (Up to 200 channels connection to GV-Mobile NVR System)
Network Type	LAN, WAN, Internet
System Monitoring and Recovery	
Power Restoration	Automatic restart after power outage
Monitoring	Software watchdog
Recovery	Automatic system rebuild from Recovery DVD
Language	
Type	Arabic / Bulgarian / Czech / Danish / Dutch / English / Finnish / French / German / Greek / Hebrew / Hungarian / Italian / Japanese / Lithuanian / Norwegian / Polish / Portuguese / Romanian / Russian / Serbian / Simplified Chinese / Slovakian / Slovenian / Spanish / Swedish / Thai / Traditional Chinese / Turkish

Software License		
Free License		32 channels from GV-IP devices
Maximum License		32 channels from third-party IP devices
Increment for Each License		1 to 32 third-party IP cameras at an increment of 2
Dongle Type		External
Compatible Protocol		ONVIF, PSIA, RTSP
Sensor and Alarm (Optional)		
Sensor Input	GV-IO Box	4, 8, 16 inputs
Alarm Output	GV-IO Box	4, 8, 16 outputs

*All specifications are subject to change without notice.

Appendix

A. Storage Recording Duration

The total of recording duration of 2 hot-swap HDDs / SSDs with capacity up to 2 TB is listed as below:

Resolution		1.3 MP	2 MP
Frame Rate		30 fps	30 fps
Bit Rate		3.7 Mbps	6.7 Mbps
1-Ch / 24 hr		42.5 GB	73 GB
8-Ch / 24 hr		340.1 GB	584 GB
16-Ch / 24 hr		680.3 GB	1.1 TB
1 TB Storage Record	8-Ch	3 days	1.5 days
	16-Ch	1.5 days	23 hr
2 TB Storage Record	8-Ch	6 days	3.5 days
	16-Ch	2.5 days	1.5 days

B. Total Frame Rate Supported

Below are the total frame rates GV-Mobile NVR can support with CPU usage of approximate 70% to ensure performance and stability. See the below charts to calculate frame rate for connected IP cameras.

For instance, if you connect 10 units of GV Fisheye 1.3 MP cameras to the system, you will receive 12 fps for each channel (120 fps / 10 units = 12 fps).

For GV IP Cameras

- Support up to 32-Ch GV-IP cameras.

Resolution	Dual Streams		Total Frame Rate
	Stream 1 (H.264)	Stream 2 (MPEG4)	
D1	704 x 480	352 x 240	960 fps
1.3 MP	1280 x 1024	320 x 256	960 fps
2 MP	1920 x 1080	448 x 252	960 fps
3 MP	2048 x 1536	320 x 240	640 fps
5 MP	2560 x 1920	320 x 240	320 fps

For GV Fisheye Cameras (De-warping)

- Support up to 8-Ch GV-Fisheye cameras of 1.3 MP.
- Support up to 3-Ch GV-Fisheye cameras of 4 MP.
- Support up to 3-Ch GV-Fisheye cameras of 5 MP.

Resolution	Single Stream (H.264)	Total Frame Rate
1.3 MP	1280 x 1024	120 fps
4 MP	2048 x 1944	45 fps
5 MP	2560 x 1920	30 fps

For Third-Party IP Cameras

- Support up to 32-Ch third-party cameras based on the total FPS below.

Resolution	Single Stream (H.264)	Total Frame Rate
VGA	640 x 480	960 fps
1.3 MP	1280 x 1024	600 fps
2 MP	1920 x 1080	480 fps
3 MP	2048 x 1536	480 fps
4 MP	2560 x 1600	240 fps
5 MP	2560 x 1920	240 fps

C. Supported IP Devices

This list provides the supported IP device brands. For detailed information on the supported IP devices, refer to Supported IP Camera List on GeoVision's website:

http://www.geovision.com.tw/english/4_21.asp

GeoVision
ACTi
Arecont Vision
AXIS
Bosch
Canon
CNB
D-Link
Etrovision
Hikvision
HUNT
IQinVision
JVC
LG
MOBOTIX
Panasonic
Pelco
Samsung
Sanyo
SONY
UDP
Verint
VIVOTEK

Warranty Policy

GeoVision, Inc. ("GeoVision") hereby provides three types of Limited Warranty as below:

■ **One (1) Year - Limited Warranty**

Including:

GV-Pad / GV-PadT series

■ **Two (2) Year - Limited Warranty**

Including:

1. **All hardware products (except all GV-series capture cards) and;**
2. **Pan Tilt Camera GV-PT110D within max 500,000 times of pan or tilt movement and;**
3. **PTZ Camera GV-PTZ010D within max 500,000 times of pan or tilt movement and lens zoom in/out.**

■ **Three (3) Year - Limited Warranty**

Including:

All GV-series capture cards

■ **No Warranty Coverage**

The cover of GV-series IP cameras is a consumable item and thus not included under these Limited Warranties.

All aforementioned products, **EXCLUDE OTHER PACKAGED ACCESSORIES AND ALL SOFTWARE**, (hereinafter called "Products") will be free from defects in materials/workmanship during the terms of these Limited Warranties ("Limited Warranties") from the date of purchase. These Limited Warranties parts and labor warranty are applicable to Products purchased via authorized distribution and sales channels.

If a defect arises and a valid claim is received by GeoVision within Limited Warranties Period, at its option, GeoVision will (1) repair Products at no charge, using new or refurbished replacement parts, or (2) exchange Products with a Product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original Products.

GeoVision warrants replacement parts or repairs for thirty (30) days from the date of GeoVision shipment or for the remainder of Limited Warranties Period, whichever provides longer coverage for you. When a Product or part is exchanged, any replacement item becomes your property and the replaced item becomes GeoVision's property.

It is customer's sole responsibility and requirement to prove these Products are under warranty (by submit your sales invoice and bar code), otherwise GeoVision will determine these Products' warranties period at its option. GeoVision reserves the right, at its sole discretion and any time, to modify and adjust the scope and content of Products and its warranty without prior notice, however, any modification and adjustment thereafter will not affect or interrupt any rights belonging to Products you purchased already.

Limitations of Warranties

Limited Warranties apply only to Products manufactured by or for GeoVision that can be identified by the "GeoVision" trademark, trade name, or logo affixed to them. Limited Warranties do not apply to any non-GeoVision products including counterfeited products. GeoVision is not liable for any damage to or loss of any profit, programs, data, or other information stored on any media, or any non-GeoVision Products or part not covered by these warranties. Recovery and reinstallation of system and application software and user data are not covered under Limited Warranties. Limited Warranties do not apply if:

- a) Products have been subjected to abnormal use, improper storage, unauthorized modifications, unauthorized repair, misuse, neglect, abuse, accident, alternation, removal of any stickers or labels on the hardware, improper hardware/software installations, or other acts that are not the faults of GeoVision, including damage caused by shipping;
- b) Products have been damaged from exposure under circumstances which is over weatherproof specification of the product, an Act of God, or improper use of any electrical source, or the connection to other products not recommended for interconnection by GeoVision;
- c) Products have defects or damage caused due to computer virus attack, internet or technical issues;
- d) Products serial number have been removed, defaced or altered;
- e) Products have been sold by an unauthorized distributor or retailer; or
- f) The system case, including GV-Hot Swap DVR System, GV-Storage System and GV-NVR System Lite, has been opened.

Disclaimer of Warranties

Except as specified in these Warranties, all express or implied conditions, representations, and warranties including, without limitation, any implied warranties or condition of merchantability, fitness for a particular purpose, non-infringement, satisfactory quality, non-interference, accuracy of informational content, or arising from a course of dealing, law, or trade practice, are hereby excluded to the extent allowed by applicable law and are expressly disclaimed by GeoVision. To the extent implied warranties cannot be excluded, such warranties are limited in duration to the express warranties period. Because some states

or jurisdictions do not allow limitations on how long implied warranties lasts, the above limitation may not apply. These warranties give customers specific legal rights, and customer may also have other rights which vary from jurisdiction to jurisdiction. This disclaimer and exclusion shall apply even if the express warranties set forth above fails of its essential purpose.

Limitation of Liability

Regardless whether any remedy set forth herein fails of its essential purpose or otherwise, in no event will GeoVision or its suppliers be liable for any lost revenue, profit or lost or damaged data, business interruption, loss of capital, or for special, indirect, consequential, incidental, or punitive damages however caused and regardless of the theory of liability or whether arising out of the use or inability to use the GeoVision Products or otherwise and even if GeoVision has been advised of the possibility of such damages. In no event shall GeoVision's liability to customer, whether in contract, tort (including negligence), breach of warranty, or otherwise, exceed the price paid by customer for the Software that gave rise to the claim or if the Software is part of another Products, the price paid for such other Products. Because some states or jurisdictions do not allow limitation or exclusion of consequential or incidental damages, the above limitation may not apply to you. In no event shall GeoVision's total liability to you for all damages (other than as may be required by applicable law in cases involving personal injury) exceed the amount of two hundred dollars (U.S. \$200.00). The foregoing limitations will apply even if the above stated remedy fails of its essential purpose. Customer agrees that the limitations of liability and disclaimers set forth herein will apply regardless of whether customer has accepted any other Products or service delivered by GeoVision. Customer acknowledges and agrees that GeoVision has set its prices in reliance upon the disclaimers of warranties and the limitations of liability set forth herein, that the same reflect an allocation of risk between the parties, and that the same form an essential basis of the bargain between the parties.

These Warranties shall be governed by and construed in accordance with the laws of Taiwan, Republic of China and United State, without reference to or application of choice of law rules or principles. The United Nations Convention on the International Sale of Goods shall not apply. If any portion hereof is found to be void or unenforceable, the remaining provisions shall remain in full force and effect.

GeoVision Inc. Warranty Policy last updated on December 26, 2011.

Warranty Requirements

To validate your purchase, you shall complete the online Product Registration **within 30 days from the date of purchase** at http://www.geovision.com.tw/english/4_6.asp. Or click **GeoVision Online Registration** in My Favorite for a direct link.

If you fail to complete the Product Registration, the warranty period will start **from the date of shipment**.

Before you return the product

Some problems you experience may be related to software or the operating system. It is important to investigate other sources of assistance first. Before returning the product, try the following:

1. Review troubleshooting sections in the documentation for software and peripheral devices.
2. Try rebuilding the operating system and GV-System by using the Recovery DVD.
3. Consult your dealer. They are your best sources for current information and support. Or you can call or email GeoVision offshore offices for assistance.

When you call or e-mail, please inform us the following:

- Model name
 - Bar Code
 - Details of the defect or problem
 - Attempted solutions
 - Your contact information
 - Reseller's contact information
4. If you find it is the software problem, please check our website or your dealer for software updates.

Obtaining Warranty Service

If you are still unable to solve the problem and suspect that it is hardware related, follow these:

1. Send an e-mail to GeoVision to start Return Merchandise Authorization (RMA) process.
E-Mail: sales@geovision.com.tw or dvrssystem@geovision.com.tw
2. Securely pack the product in its original carton using the original packing material, or in equivalent packaging.
3. The product shall be returned to **GeoVision, Taiwan** at your expense for shipping and insurance costs.

BEFORE YOU DELIVER YOUR GV-MOBILE NVR SYSTEM FOR WARRANTY SERVICE, IT IS YOUR RESPONSIBILITY TO BACK UP YOUR DATA. YOU WILL BE RESPONSIBLE FOR REINSTALLING ALL DATA, SETTINGS AND PASSWORDS. DATA RECOVERY IS NOT INCLUDED IN THE WARRANTY SERVICE AND GEOVISION IS NOT RESPONSIBLE FOR DATA THAT MAY BE LOST OR DAMAGED DURING TRANSIT OR A REPAIR.

Warranty Form

Thank you for purchasing the GV-Mobile NVR System. To help us validate your purchase and better serve you in the future, please go to http://www.geovision.com.tw/english/4_6.asp or click **GeoVision Online Registration** in My Favorite for a direct link to register online **within 30 days from the date of purchase**. Please keep this copy for your records.

Name: First (given)		Surname (family name)	
Company Name (only if the product is owned by company):			
Mailing Address:			
City/Town:		Province/State:	
Country:		Postal Code:	
Telephone: (O)		(H)	
Fax:			
E-Mail:			
Date of Purchase: (e.g. 16-APR-2012)			
Product: <u>Please check the model and its items you purchased.</u>			
Model			
<input type="checkbox"/> GV-Mobile NVR System			
The system with third-party IP devices			
<input type="checkbox"/> 1 Channel	<input type="checkbox"/> 2 Channels	<input type="checkbox"/> 4 Channels	<input type="checkbox"/> 6 Channels
<input type="checkbox"/> 8 Channels	<input type="checkbox"/> 10 Channels	<input type="checkbox"/> 12 Channels	<input type="checkbox"/> 14 Channels
<input type="checkbox"/> 16 Channels	<input type="checkbox"/> 18 Channels	<input type="checkbox"/> 20 Channels	<input type="checkbox"/> 22 Channels
<input type="checkbox"/> 24 Channels	<input type="checkbox"/> 26 Channels	<input type="checkbox"/> 28 Channels	<input type="checkbox"/> 30 Channels
<input type="checkbox"/> 32 Channels			

Bar Code:

Shipment Date:

GeoVision, Inc.

9F, No. 246, Sec. 1, Neihu Rd.,

Neihu District, Taipei, Taiwan

Tel: +886-2-8797-8377

Fax: +886-2-8797-8335

Email: sales@geovision.com.tw

dvrssystem@geovision.com.tw

<http://www.geovision.com.tw>